



Welcome


Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola E680 GSM wireless phone.

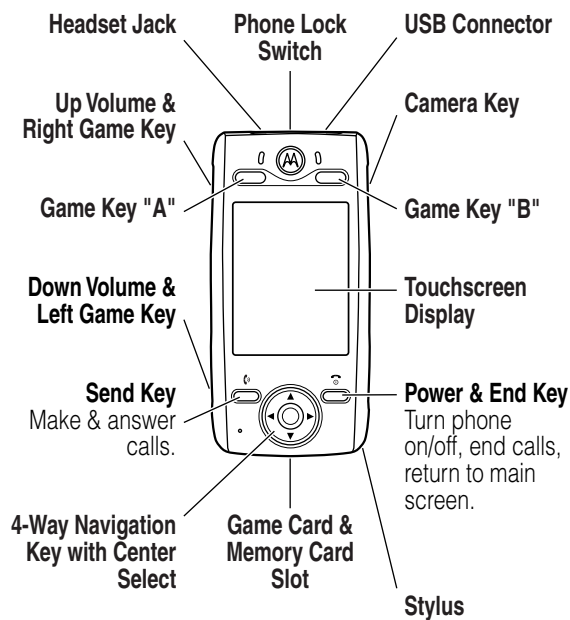

Note: Your phone may not appear exactly as shown above. All features and functions remain the same regardless of your phone's appearance.

Check It Out!

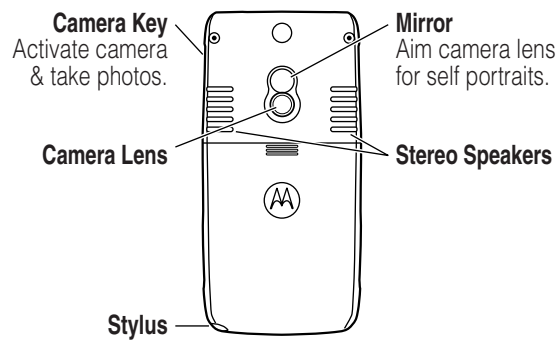

Feature	Description
Take Photo	Press the camera key to activate the camera, point lens at subject, then press the camera key to take a photo.
Record Video	Press the camera key to activate the camera. Tap  , then tap Record video . Tap Record to start video recording. Tap Done to stop video recording.

Feature	Description
Send Multimedia Message	<p>Send a multimedia message with pictures, animations, sounds, and videos:</p> <p>Tap , then tap Compose. Tap the <i>message type</i> pull-down menu, then tap MMS.</p> 
Play Music or Video Clip	<p>Play a song or watch a video clip stored on your phone:</p> <p>Tap  RealPlayer, tap , then tap Open. Tap File, then tap <i>filename</i> to play.</p>
Wireless Connection	<p>Set up a Bluetooth® wireless connection to a headset accessory, car kit, or external device:</p> <p>Tap  Bluetooth, tap . Tap Turn on. Tap Search to locate the Bluetooth device.</p>
Phone Theme	<p>Apply a phone theme:</p> <p>Tap  Theme, tap and hold <i>theme name</i>, tap Set to Current.</p>

Personal Communications Sector
(852) 2506-3888 (Hong Kong)
www.motorola.com.hk (Hong Kong)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows, ActiveSync and Windows Media are registered trademarks of Microsoft Corporation; and Windows XP and Windows Mobile are trademarks of Microsoft Corporation. RealPlayer, and the Real logo are trademarks or registered trademarks of RealNetworks, Inc.. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2004.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Mobile Phone Tools Software Disclaimer

Music or other audio works, whether originating from CD's, MP-3's or some other source, ("Music Materials") may be protected under copyright law. Unauthorized copying of copyrighted works may be contrary to the provisions of the copyright laws of the United States and other countries. It is your responsibility, not Motorola's, to ensure that your use of Mobile Phone Tools software and/or Motorola phones to copy, edit, play or otherwise use any Music Materials does not violate the copyright laws. You are responsible for obtaining any necessary permission and paying any necessary licensing fees for the Music Materials other materials you choose to copy, edit, play or otherwise use. A violation of copyright laws could result in a civil or criminal claim brought against you, even if you don't receive any money or other commercial benefit from your copying or other use of the material. This software should only be used for your personal, noncommercial purposes.

Manual number: 6887301Z57

Contents

Safety and General Information	10
Getting Started	17
About This Guide	17
Installing the SIM Card	18
Installing a Memory Card	19
Battery Use	20
Installing the Battery	22
Charging the Battery	23
Turning Your Phone On	24
Turning Your Phone Off	24
Adjusting Volume	25
Making a Call	25
Answering a Call	26
Changing the Call Alert	26
Viewing Your Phone Number	27
Locking and Unlocking Your Phone	27
Highlight Features	28
Using the Camera	28
Sending a Multimedia Message	31
Receiving a Multimedia Message	35
Using the Real Player	36
Using a Bluetooth® Wireless Connection	37
Learning to Use Your Phone	41
Using the Touchscreen Display	41
Using the 4-Way Navigation Key	44
Using the Game Keys	45
Opening Phone Features	45
Entering Text	47

Using the Handsfree Speaker	50
Changing a Code, PIN, or Password	50
Locking and Unlocking Your Phone	51
If You Forget a Code, PIN, or Password	52
Setting Up Your Phone	53
Storing Your Name and Phone Number	53
Setting the Date and Time	54
Setting a Ring Style	54
Setting a Phone Theme	55
Setting Backlight Brightness and Duration	57
Conserving Battery Power	58
Calling Features	59
Changing the Active Line	59
Redialing a Number	59
Using Automatic Redial	60
Using Caller ID	60
Canceling an Incoming Call	61
Turning Off a Call Alert	61
Calling an Emergency Number	62
Dialing International Numbers	62
Direct Dialing an Extension or Voicemail Number	63
Dialing an Extension Number During a Call	63
Dialing Recent Calls	64
Calling With Turbo Dial	64
Putting a Call On Hold	65
Muting a Call	65
Dialing Another Number During a Call	66
Transferring a Call	67
Messages	68
Using the Message Center	68
Setting Up Your Signature	69

Sending a Text Message	70
Sending a Multimedia Message	71
Viewing the Status of Unsent Messages	72
Tips For Sending Messages	72
Receiving a Message	72
Reading and Replying to Messages	74
Storing an Object From a Multimedia Message	75
Viewing Messages	75
Viewing Draft Messages	75
Viewing Deleted Messages	76
Viewing Messages on Your SIM Card	76
Creating and Using a Personal Folder	77
Moving Messages Between Folders	78
Setting Up the Message Inbox	79
Using Instant Messaging	82
Email	85
Using Mailboxes and Folders	85
Sending an Email Message	86
Receiving an Email Message	88
Reading, Copying, or Moving Email Messages	88
Creating and Using a Personal Folder	89
Setting Up the Email Mailbox	89
Setting Up Your Address Book	93
Viewing Your Contact List	93
Adding a New Contact	94
Creating a Group	95
Calling or Sending a Message to a Contact	96
Calling a Contact with Fast Dial	96
Setting a Category Ring Tone	97
Searching for a Contact	98
Deleting a Contact	98

Copying Contacts	99
Checking Address Book Capacity	100
Sharing Contact Information	100
Viewing and Editing Owner's Information	101
Personalizing Your Phone	102
Setting the Display Language	102
Setting Sound Volume	102
Adjusting Text Input Settings	103
Calibrating the Touchscreen Display	103
Resetting All Options	104
Clearing All Stored Information	104
Getting More Out Of Your Phone	106
Viewing Recent Calls	106
Making a Conference Call	107
Forwarding Calls	107
Barring Calls	109
Using Fixed Dialing	109
Monitoring Phone Use	110
Using Handsfree Features	113
Sharing Information	115
Using Sync	116
Using a Modem Connection	119
Adjusting Network Settings	120
Managing Your Files	123
Using Voice Instruction	128
Setting Voice Command Options	131
Personal Organizer	132
Calendar	132
Tasks	137
Note Pad	138
Drawing Pad	139

Alarm Clock	141
World Time	142
Voice Recorder	143
Calculator	145
Security	147
Locking the SIM Card	147
News and Entertainment	149
Micro-Browser	149
Games and Applications	154
STK	155
Radio	155
Troubleshooting	158
Specific Absorption Rate Data	165
Software Copyright Notice	167
RF Energy Interference	167
Index	168

Note:

The functions available on this mobile phone may vary in different regions and nations. Please contact your local customer service centers, agencies or retailers if you have any question about the mobile phone functions. Motorola reserves all rights to revise and change this user's manual without obligation to notify any person of such revisions or changes.

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.
READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user's guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimeters) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimeters) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antennas, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices may be found at the Motorola website: www.Motorola.com/callsmart.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.





 
Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing

video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

IMEI: 350034/40/394721/9

CE0168

Type: MC2-41H14

Product
Approval
Number

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

Getting Started



About This Guide

This guide describes the basic features of your Motorola wireless phone.

Getting Started

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.


Installing the SIM Card

Your *Subscriber Identity Module* (SIM) card contains your phone number, service details, address book, and messages.


Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.




1.

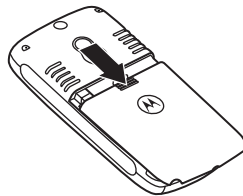


2.

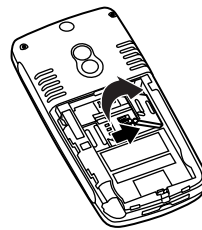

3.

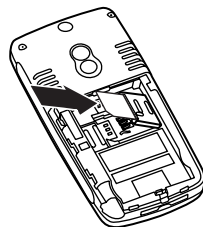

4.

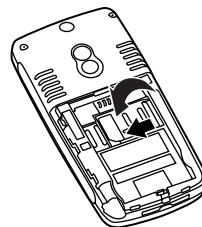

Installing a Memory Card



Getting Started



You can insert a *Secure Digital* (SD) memory card or *MultiMedia Card* (MMC) memory card into the game card slot on your phone, and use the memory card to store and retrieve multimedia objects (such as photos, videos, and MP3 music files).

Warning: Please do not bend or scratch the memory card, and nor allow it to touch static electricity, dust or dip in water.

Prompt: For the safety of the data in the memory card, before pulling out it, please press the status of the main screen, and click the options in SD/MMC card to **pop up**.

Note: Due to a known Microsoft® Windows® USB driver issue, a computer running Windows 2000 with Service Pack 1 or Service Pack 2 will not recognize a memory card inserted into your phone when you attempt to transfer or synchronize data between your phone and computer through a USB cable connection.

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; accessory items attached to the phone; and your voice, data, and other application usage patterns.

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.



Getting Started



Getting Started

- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

Warning: Never dispose of batteries in a fire because they may explode.

Installing the Battery




TM Your phone is designed to use only Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.


Note: Your phone battery may be enclosed in a protective clear plastic case. Remove the battery from the case before attempting to install it.




1.

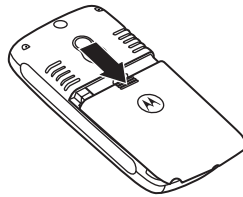

2.

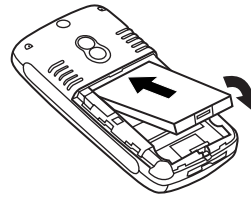

3.

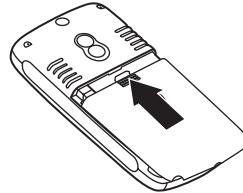




Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

- 1 Plug the travel charger into the USB connector port on your phone as shown.

Note: It may take up to 10 seconds for your phone to provide a visible or audible indication that the battery is charging.

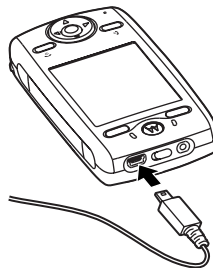


- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates **Charge Complete**, remove the travel charger.

Tip: You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.


When the phone is on, the battery can be charged by connecting the phone to a PC or Palm PC with an USB cable.

Note: Not all PCs or Palm PCs support this charging method.

Turning Your Phone On

- 1 Press and hold the power key  for 2 seconds to turn the phone on.

Note: It may take up to 4 seconds for the display to illuminate after you turn the phone on.

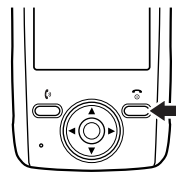

Getting Started

- 2 If necessary, enter your SIM card PIN code and tap **OK** to unlock the SIM card.

Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

- 3 If necessary, enter your 4-digit unlock code and tap **OK** to unlock the phone.

Note: If you do not insert a SIM card, your phone displays **No SIM card!**. You can select **Antenna on** (to make an emergency call) or **Antenna off** (to play games or use your phone's personal organizer features).

Turning Your Phone Off


Press and hold the power key  for 2 seconds to turn the phone off.

Adjusting Volume





Press the up or down volume keys to:

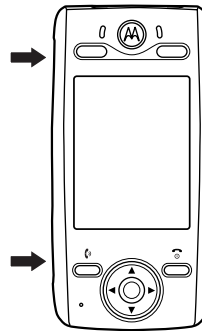- turn off an incoming call alert
- increase or decrease earpiece volume during a call
- increase or decrease volume when you play an audio file or have the radio playing in the background





Making a Call

- 1 Tap  in the top application selector bar to display the phone keypad.
- 2 Tap the keypad keys to dial the phone number.
- 3 Tap **Send** to make the call.
Alternatively, you can press the send key  to make the call.



- 4 When you are finished, tap **End** to end the call.


Alternatively, you can press the end key  to end the call.

Tip: Tap  to select a number from a list of recent received or dialed calls.


Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.


- 1 Tap **Ans.** to answer the call.

Alternatively, you can press the send key  to answer the call.

- 2 When you are finished, tap **End** to end the call.


Alternatively, you can press the end key  to end the call.

Tip: If you prefer not to answer the call, you can tap **Ign.** to hang up on the caller, or tap **Busy** to transmit a busy tone signal to the caller.

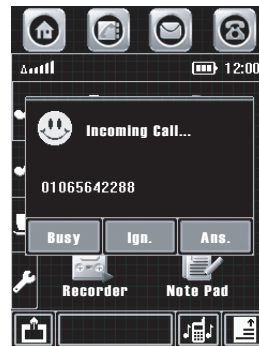

Getting Started



Changing the Call Alert

Tap  in the bottom button bar in the home screen to change the call alert setting.

Viewing Your Phone Number

To view your phone number:




- 1 Tap  in the top application selector bar to display the phone keypad.
- 2 Tap  in the bottom button bar to open the phone menu.
- 3 Tap **My number** to view your phone number.

While you are on a call, tap  and then tap **My number**.

Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 53. If you do not know your phone number, contact your service provider.

Locking and Unlocking Your Phone

You can lock your phone to prevent accidental keypresses (for example, when carrying your phone in a purse or pocket).

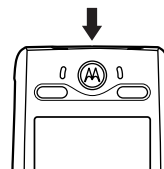

- Slide the lock key to the **right** to lock the phone.
- Slide the lock key to the **left** to unlock the phone.

Highlight Features

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlight features.



Highlight Features


Using the Camera

Shortcut: Press the camera key to activate the camera. Press the camera key again to take a photo.

To activate the camera from the main screen, tap




The active viewfinder image appears on your display.

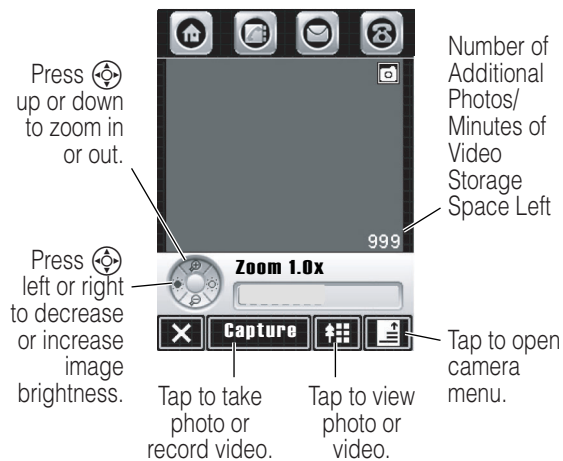





Using the Viewfinder

Point the camera lens at the photo subject. Press  as indicated to zoom in/out and adjust image brightness.



The number in the lower-right corner of the viewfinder represents the number of additional photos, or the minutes and seconds of additional video, that can be stored in the current selected memory storage location.

Taking a Photo

Tap **Capture** or press the camera key to take a photo.

Tip: If the camera is in video mode, tap , then tap **Capture photo** to put the camera in photo mode. The mode indicator in the upper-right corner of the viewfinder changes to  to show that the camera is in photo mode.



Recording a Video

Tap , then tap **Record video** to put the camera in video mode. The mode indicator in the upper-right corner of the viewfinder changes to  to show that the camera is in video mode.


Tap **Record** to start recording a video. Tap **Done** to stop video recording.

Previewing a Photo or Video

Tap  to preview your new photo or video. When previewing a video, tap  to play the video.

Tap  or  at the top of the display to view the previous or next photo or video.

To delete a photo or video, tap .

Tap  to perform various operations on your photo and video files.

Using Effects

Tap , then tap **Effects** to open the camera effects menu.

You can adjust the **Brightness** of your photo or video, specify the **Light** conditions, and select a photo **Style** (such as **Black and white** or **Sepia** tones).

Adjusting Setup Options

Tap , then tap **Setup** to open the camera setup menu.

You can set or adjust the following options:

Option	Description
Photo	Set the Size and image Quality of the photos you take.
Video	Set the Size and image Quality of the videos you record.





Highlight Features




Highlight Features

Option	Description
Default name	Apply a date and time stamp, or specify a text prefix for the photos and videos you take.
Shutter sound	Set the shutter sound.
Save to	Specify the location where your photos/videos are saved.

Using the Delay Timer

Tap , then tap **Delay timer on** to activate the delay timer. The timer indicator  displays in the upper-left corner of the viewfinder.

Tap **Start** to activate the timer. The timer counts down from 10 seconds, and then takes a photo. You can tap **Stop** to stop the timer at any time during the countdown.

Tip: To take a self-portrait: Activate the timer, and use the mirror to aim the camera lens. When you hear the camera click, tap  to view your photo.








Sending a Multimedia Message



A **Multimedia Messaging Service (MMS)**

multimedia message contains one or more pages with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and/or video clips). You can send an MMS message to other wireless phone users, and to email addresses.

To compose and send an MMS message:


- 1 Tap  in the top application selector bar to go to the message center.
 - 2 Tap **Compose**.
 - 3 Tap the *message type* pull-down menu, then tap **MMS** to open the MMS message composition screen (shown at right).
-
- 4 Tap , then tap a text entry method to enter text on the page. When you are finished, tap , then tap **Hide keyboard** to hide the text entry keyboard or pad.
 - 5 Tap a button in the media toolbar at the bottom of the screen to insert media objects on the page or attach files to the message.
 -  Tap to insert a picture, video, or new drawing on the page.
 -  Tap to insert a sound file or new voice record on the page.
 -  Tap to activate the **Camera**, take a photo, and insert it on the page.
 -  Tap to attach a contact, event, task, or file to the message.




Highlight Features



Highlight Features

- 6 To add a new page after the current page, tap . Repeat steps 4 and 5 to enter contents for the new page.
- 7 To enter the message recipient(s), tap **To** to select numbers or addresses from your address book, or tap the direct line in the **To** field to enter a phone number or email address.
- 8 Tap **Cc**, **Bcc**, or **Subject** to enter additional recipients or a message subject. (Use the MMS menu, described below, to show or hide these fields.)
- 9 Tap **Send** to send the message.

When composing an MMS message, you can tap  to perform various operations on the message prior to sending it. The MMS menu can include the following options:

Option	Description
Load	Insert a quick card, quick text note, or auto-signature on the page.
Save to	Save the message to the Draft folder, or save it as a quick card.
Page length	Set the number of seconds each page is displayed.
Preview	Preview the MMS message.

Option	Description
Show	Show or hide the Cc , Bcc , and/or Subject header fields. Use Cc or Bcc to carbon-copy or blind-carbon-copy the message to additional recipients. Use Subject to specify a subject for the message.
Send options	Receipt request : Request a delivery report or read report for the message. Expire after : Set the expiration time for an undelivered message. Priority : Set message priority. Delivery Time : Set a time and date for your network server to send the message.
Delete	Delete the current page, delete an object on the page, or delete the message.



Highlight Features

Receiving a Multimedia Message





Highlight Features




Your phone displays the  **Prompt** icon in the top application selector bar to notify you that you have received a new MMS message.

When you open an MMS message:

- Tap  to display message details (sender, subject, time, and size).
- Tap  to play the message.


Note:  will show as  when the MMS message has the attachment.

- Tap  to perform various operations on the message. The received MMS message menu can include the following options:


Option	Description
Reply By SMS	Send an SMS reply to the message.
Save File	Save a media object in the message.
Save As Quick Card	Save the current MMS page as a quick card. You can insert the quick card into MMS messages that you compose.
Move To Folder	Move the message to another message center folder.
Delete Message	Delete the message.

Using the Real Player


Your phone includes a Real Player that you can use to play audio and video files.

Tap  RealPlayer in the main screen to launch the media player.



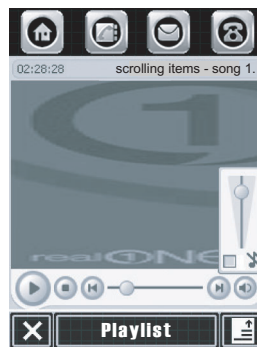





Alternatively, you can press game key "A" at any time to launch the media player.



Highlight Features

 

To play a media file, tap , then tap **Open**. Tap **File** to play a media file stored on your phone, or tap **URL** to download and play a media file from a Web site.

In the media player window:

- Tap  to play the current media file.
- Tap  to stop playing.
- Tap , tap  or  to play the previous or next file.
- Tap , tap the volume slider to adjust the volume. Alternatively, you can press the volume keys to adjust volume.
- Tap , check  to mute the sound. Tap it again to resume.



 Highlight Features



Tap **Playlist** to display the name of the current media file. When the now playing list is displayed, tap  and tap **Add**, tap **File** or **URL** to add other media files. Tap  can also perform other media-related operations.

Using a Bluetooth® Wireless Connection




Your phone supports Bluetooth wireless connections. You can set up a wireless link with a Bluetooth headset accessory, speakerphone, or handsfree car kit, or connect to a computer or hand-held device to exchange and synchronize data.

Turning Bluetooth On/Off

- 1 Tap  **Bluetooth** in the main screen to display the device list.
- 2 Tap , then tap **Turn on** or **Turn off** to activate or deactivate Bluetooth.

Searching for Other Devices

To connect your phone to a headset accessory or handsfree device:

- 1 Tap  **Bluetooth** in the main screen to display the device list.
- 2 If necessary, turn Bluetooth on.
- 3 Tap **Search** to search for available Bluetooth devices.

Your phone displays a list of device(s) located within range of the phone. If your phone is already connected to a device, your phone identifies the connected device.



To connect to a device, select it from the list. The device may request permission to bond with your phone. Enter the correct PIN code to create a secure connection with the device.



Highlight Features

Making Your Phone Visible to Other Devices

To allow an unknown Bluetooth device to discover and connect to your phone:

- 1 Tap  **Bluetooth** in the main screen to display the device list.
- 2 If necessary, turn Bluetooth on.
- 3 Tap , tap **Discoverable** to put your phone into discoverable mode until a connection is made, or until the discoverable time elapse.

The device may request permission to bond with your phone. Enter the correct PIN code to create a secure connection with the device.

Connecting to a Recognized Device

Your phone stores the names of previously connected devices. The device list shows the recognized devices located within range of the phone. If your phone is already connected to a device, your phone identifies the connected device.

**Highlight Features**

Tap a device name to view its details. Tap and hold the device name to open a pop-up menu from which you can choose to **Create bond**, **Connect/Disconnect**, **Delete**, or **Lock/Unlock** the device.

For a Motorola headset or other audio device, your phone automatically attempts to connect to the device.

Note: The phone can only bond with one Bluetooth device each time.

Disconnecting From a Device

To disconnect from a device, tap and hold the device name to open a pop-up menu, then select **Disconnect** to drop the connection.

Exchanging Objects With Another Device

You can use a Bluetooth wireless connection to exchange a multimedia object or vObject (such as a vCard address book entry or vCalendar calendar event) with another phone, computer, or hand-held device.

Sending an Object

Turn on Bluetooth, then:

- 1 Tap and hold the object to open a pop-up menu, then select **Share** to display a list of share options.
- 2 Tap **Bluetooth**, then tap ok to display the device list.
- 3 Tap the device name on the list, or tap **Search** to locate the device.

- 4 Tap **Send** to send the object. If necessary, enter the correct PIN code to create a secure connection with the device.

Receiving an Object

Turn on Bluetooth. Your phone alerts you when it receives a data transfer request from the other device.

Tap **OK** to accept the data. If necessary, enter the correct PIN code to create a secure connection with the device.

Your phone notifies you when object transfer is complete, and may prompt you to specify the location where you wish to store the file.



Highlight Features

Learning to Use Your Phone


See page 1 for a basic phone diagram.



Using the Touchscreen Display

Main screen page 1 is displayed when you turn on your phone.

Learning to Use Your Phone

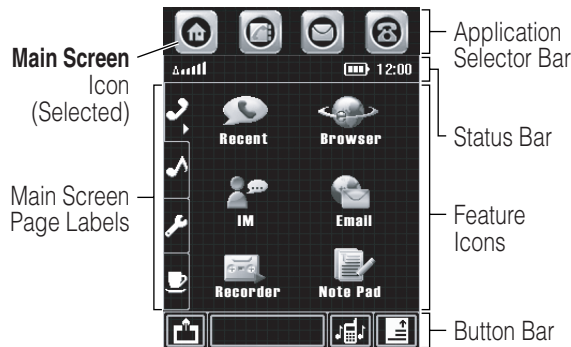







You can use all of your phone's features by tapping on feature icons, buttons, and text with the provided stylus. Tap a page label on the left side of the screen to display main screen pages 1, 2, 3, or 4. Tap on a feature icon to select the feature.

Note: Your home screen may look different than the display shown above. For example, phone features can be displayed as a text-based list view instead of as feature icons, and the background image changes based on the phone theme you select.

Application Selector Bar

Icons in the application selector bar give you easy access to commonly used applications:

- | | | |
|---|---------------------|--------------------------|
|  | Main Screen | Go to the main screen |
|  | Address Book | Go to the address book |
|  | Message | Go to the message center |
|  | Phone | Display the phone keypad |


In addition to the standard icons, your phone displays a  **Prompt** icon in the application selector bar to notify you of a missed call or new message. Tap  to view information about the call or message.



Learning to Use Your Phone

Status Bar

The following indicators can display in the status bar:

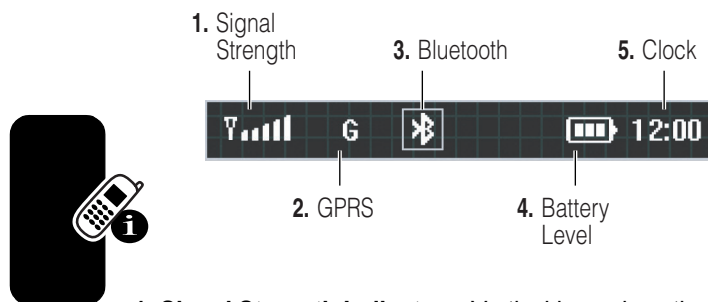

Learning to Use Your Phone

1. Signal Strength Indicator – Vertical bars show the strength of the network connection. You cannot make or receive calls when the (no signal) indicator or (no transmit) indicator is displayed.



2. GPRS Indicator – Shows that your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. GPRS allows faster data transfer speeds. A darkened indicator shows that a GPRS connection is not available.








3. Bluetooth® Indicator – Shows that your phone has established a Bluetooth wireless connection with a headset accessory or other external device.

4. Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.

5. Clock – Shows the current time.


Button Bar


The button bar shows functions you can select in the active application.

-  **Return** Tap to return to the previous screen, or to exit a feature or application.
-  **Menu** Press to open a context sensitive menu.
-  **Ring Style** Tap to set the ring style, and select one of the following settings:
 -  = ring alert
 -  = vibrate alert
 -  = vibrate then ring
 -  = silent


The button bar also displays the name of your service provider when your SIM card is inserted in the phone.

Using the 4-Way Navigation Key

Press the 4-way navigation key  up, down, left, or right to scroll through screens and feature icons, highlight items, change feature settings, and play games.

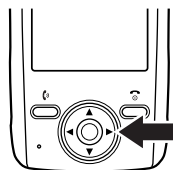

Learning to Use Your Phone

Press the center select button  in the center of the 4-way navigation key to select a highlighted item.

Note: This guide describes how to use the stylus and touchscreen control to use phone features. In most cases, it does not include the equivalent navigation key for using the feature.



Using the Game Keys

You can use the up/down volume keys and dedicated game keys “A” and “B” (see page 1) to control games that you play on your phone. See the game’s playing instructions for additional information.

When you are **not** playing a game, you can perform the following actions:

- Press game key “A” at any time to launch the Real Player (see page 36).
- Press game key “B” at any time to turn on the radio and/or access the radio controls (see page 155).


Learning to Use Your Phone

Opening Phone Features

























Your phone has many built-in features for communications, personal organization, and entertainment. Every feature has an associated icon.

You can open a feature in the following ways:

- Tap one of the icons in the application selector bar at the top of the screen. These icons are always visible on the screen.

- Tap  in the top application selector bar to go to the main screen. The main screen displays icons for all of your phone's features. Tap a page label on the left side of the screen to display main screen pages 1, 2, 3, or 4. Tap on a feature icon to select the feature.



The following icons identify features available on the main screens:

 Alarm	 Bluetooth
 Browser	 Calculator
 Calendar	 Camera
 Drawing	 Email
 File Mgr.	 IM
 RealPlayer	 Modem
 Network	 Note Pad
 FM radio	 Recent
 Recorder	 Security
 Setup	 STK
 Sync	 Tasks
 Theme	 World Time



Learning to Use Your Phone

Your phone may contain additional Java™ games or applications that add features and functionality to your phone. Java games and applications are accessed from the main screen on your phone.


Tip: You can set your phone to display the main screen features as a text-based list rather than graphic icons. Tap , then tap **List view** to change to list view. From list view, tap , then tap **Thumbnail view** to reset the graphic icons.



Learning to Use Your Phone


Entering Text

Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

Tap a text entry area on the screen to bring up a text entry window. If necessary, tap the entry method button  at the bottom of the screen to select a text entry method.

Handwriting

You can use the stylus as a pen to write letters, numbers, and punctuation directly on the screen.

In a text entry window, tap  and tap **Handwriting** to open the handwriting pad (shown at right). Tap a button on the handwriting pad to select Chinese characters, English text, or numbers as the type of text you want to enter.



Use the stylus to write in one of the 2 writing spaces. For best performance, alternate between the writing spaces so that recognition can occur in one while you are writing in the other.

Write a text character, then wait for your phone to recognize and place it in the text entry window. If your phone places an incorrect character, tap the character in the choice area that you want to replace it.

Your phone uses a predictive text function to predict the word you are writing. Tap a word in the prediction area to place it in the text entry window.

To enter special characters or edit text, use the function buttons described on page 49.



Learning to Use Your Phone

Pinyin Keyboard


Use the Pinyin keyboard (shown at right) to enter Chinese characters. Tap keyboard characters in sequence to spell the pinyin. The letters you enter display in the pinyin area, and corresponding Chinese characters display in the choice area. To see additional characters, tap the previous button ◀ or next button ▶. Tap the desired character to place it at the cursor location in the entry window.



Your phone predicts the pinyin you are spelling, and highlights the next letters you can type to finish the word.

Zhuyin Keyboard

Use the Zhuyin keyboard (shown at right) to enter Chinese characters using Zhuyin symbols. Keyboard operation is similar to the Pinyin keyboard described above.

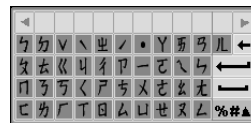

English Keyboard

Use the English keyboard (shown at right) to enter letters and numbers at the cursor location in the text entry window.



Number Pad

Use the numeric pad (shown at right) to enter digits and/or numeric symbols at the cursor location in the text entry window.



Function Buttons

Tap or with any text entry method to open the symbol pad, to enter a symbol at the cursor location. Tap to lock or hide the symbol pad.

To delete the character to the left of the cursor, tap .

To move the cursor to the next line, tap .

To enter a space at the cursor location, tap .

Tip: Tap a location in the text entry window to move the cursor to that location.

Using the Handsfree Speaker

When you activate your phone's handsfree speaker, you can talk to the other party without holding the phone to your ear.

Tap **Spkr** to turn the handsfree speaker on or off during a call. The handsfree speaker remains on until you tap **Spkr** again or turn the phone off.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.




Learning to Use Your Phone

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password, tap  **Security** in the main screen, tap the **Security** button in the bottom button bar, then tap **Password** to open the change passwords screen.

Locking and Unlocking Your Phone




You can set your phone to lock automatically when it turns off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked (see page 62).

Locking Your Phone

Tap  **Security** in the main screen, then tap **Phone lock**, tap **On**. Your phone prompts you to enter the unlock code. Enter your unlock code to lock the phone.

Unlocking Your Phone

When you see the **Lock code** prompt, enter your unlock code to unlock the phone.

Tip: Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number.

If You Forget a Code, PIN, or Password

Note: Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to the last 4 digits of your phone number before you receive your phone.



If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.



Learning to Use Your Phone

Setting Up Your Phone

Storing Your Name and Phone Number


- 1 Tap  in the top application selector bar to display the phone keypad.
- 2 Tap  in the bottom button bar to open the phone menu.
- 3 Tap **Setup** to open the phone setup menu.
- 4 Tap **My number** to open the number editor.
- 5 Enter your name and number (for line 1 **and** line 2, if applicable), then tap **Done** to store the information.

If you do not know your phone number, contact your service provider.

Setting Up Your Phone

Setting the Date and Time

You must set the date and time to use the calendar application.

- 1 Tap  **Setup** in the main screen, then tap **Date and time**.
- 2 Tap **Date** to set the date on the date setup calendar (shown at right).
- 3 Tap **Time** to set the current time. When you are finished, tap **Done** to return to the setup screen.



Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

You can select one of 3 different ring styles, or turn off the incoming call alert. To set a ring style, tap the *ring style* button in the main screen and select one of the ring styles described on page 44.




Setting Up Your Phone

Setting a Phone Theme

A *phone theme* consists of a set of images, sounds, and user interface settings that you can apply collectively to your phone. A phone theme includes the following components:

- wallpaper image
- screen font size
- incoming call ring tones (lines 1 and 2)
- incoming message ring tone
- general alert tone
- power up screen image
 - power down screen image

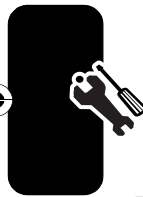

Setting Up Your Phone

The *wallpaper* image is a photo, picture, or animation that appears in your phone's display when no feature or application is selected.

Ring tones are alerts that notify you of incoming calls, messages, and phone events.

You can modify a theme's components to customize the theme for your phone.

Your phone includes several preloaded themes. You can download and install additional themes on your phone.


Note: The background image that appears in your phone's main screen changes based on the phone theme you select.

Downloading a Theme

To download a theme from the micro-browser, see page 151.


Selecting a Theme

You can apply any of the themes installed on your phone.


- 1 Tap  **Theme** in the main screen to display the theme screen.
- 2 Tap and hold the *theme name* to open a pop-up menu, then tap **Set to Current**.

Configuring a Theme

You can change a theme's settings to customize the theme for your phone.


- 1 Tap  **Theme** in the main screen to display the theme screen.
- 2 Tap the *theme name* to open the theme edit menu.
- 3 Edit theme settings as desired, then tap **Done** to save your changes.

Tip: To reset the default theme settings, tap and hold the *theme name* to open a pop-up menu, then tap **Reset to Default**.

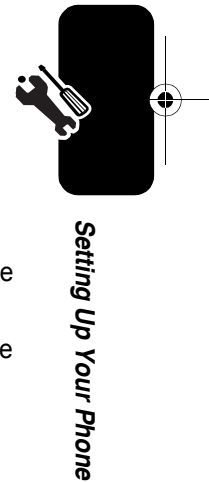




Deleting a Theme


You cannot delete the preloaded themes on your phone.
To delete a theme that you have downloaded and installed:

- 1 Tap  **Theme** in the main screen to display the theme screen.
- 2 Tap and hold the *theme name* to open a pop-up menu, then tap **Delete**.

Setting Backlight Brightness and Duration

Setting Up Your Phone


- 1 Tap  **Setup** in the main screen, then tap **Backlight setup**.
- 2 Tap  and  to decrease or increase backlight brightness.
- 3 Tap **LCD sleep time** to set the amount of time that the backlight remains on.
- 4 Tap **Done** to save your settings.

Tip: Tap  to return to the setup screen without saving your changes.

Note: Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you tap the screen or press any key.

Conserving Battery Power

Your phone includes several features designed to help extend battery life.

Tap  **Setup** in the main screen, then tap **Power management**. Your phone displays a battery charge meter that indicates the remaining battery power.

The **Battery Save** feature automatically adjusts phone settings to maximize battery life. Set **Battery Save** to **On** or **Off** to activate or deactivate the feature.

The **Auto off** feature automatically turns your phone off after a period of inactivity. Tap **On** to activate the feature, then tap **Off time** to specify the period of inactivity, in hours and minutes, after which your phone turns itself off.

Tap **Done** to save your settings and return to the setup screen.



Setting Up Your Phone

Calling Features

For basic instructions on how to make and answer calls, see page 25.

Changing the Active Line





Change the active phone line to make and receive calls from your other phone number.



Note: This feature is available only for dual-line-enabled SIM cards.

Calling Features



- 1 Tap  in the top application selector bar to display the phone keypad.
- 2 Tap  in the bottom button bar to open the phone menu.
- 3 Tap **Switch to line 2** (or **line 1**) to switch to the other line.

Redialing a Number

- 1 Tap  in the top application selector bar to display the phone keypad.
- 2 Tap , then tap **Dialled calls** to go to the dialed calls list.
- 3 Tap the number you want to redial.

Using Automatic Redial



When you receive a busy signal, your phone displays **Call busy**.

To redial the phone number, tap **Redial**.

Your phone automatically redials the number.

Using Caller ID

Incoming Calls



Calling line identification (caller ID) displays the phone number for incoming calls in your phone's display.

The phone displays the caller's name (and picture ID, if available) when the name is stored in your address book, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ring tone for specific contacts stored in your address book. For more information, see page 94.


Outgoing Calls




You can show or hide your phone number as an ID for the calls that you make.

Calling Features



- 1 Tap  in the top application selector bar to display the phone keypad.

- 2 Tap  in the bottom button bar to open the phone menu.
- 3 Tap **Setup** to open the setup menu.
- 4 Tap **Show ID**, then tap **On** or **Off** to show or hide your caller ID with outgoing phone calls.

Tip: Select **Net controlled** to let the network determine your caller ID status.

Canceling an Incoming Call



While the phone is ringing or vibrating, tap **Ign.** to cancel the incoming call.

Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.

Calling Features

Turning Off a Call Alert




You can turn off your phone's incoming call alert before answering the call.

Press either volume key to turn off the alert.


Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 999 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Tap  in the top application selector bar to display the phone keypad.
- 2 Tap the keypad keys to dial the emergency number.
- 3 Tap **Send** to make the call.

Dialing International Numbers

When the phone keypad is displayed, tap and hold  to insert the local international access code (+) for the country from which you are calling.


Alternatively, you can tap , tap **Insert**, then select **Insert +** to insert the local international access code.

Calling Features



Direct Dialing an Extension or Voicemail Number

To dial an extension or voicemail number directly, you can insert a pause (P) character into the dialing sequence.



- 1 Use the keypad to dial the phone number.
- 2 When you need to insert a pause, tap , tap **Insert**, then select **Insert pause** to insert a P at the cursor location.
- 3 Dial the extension number.
- 4 Tap **Send** to make the call.

Your phone dials the phone number, waits for the call to connect, then dials the remaining digits.

Tip: Use the same procedure to insert a wait (W) character in the dialing sequence. Your phone dials the number, waits for the call to collect, then prompts you for confirmation before it dials the remaining digits.





Dialing an Extension Number During a Call

- 1 Tap the keypad button  to display the phone keypad.
- 2 Dial the extension number.
- 3 Tap  to return to the on-call status screen.

Dialing Recent Calls


Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

- 1 Tap  in the top application selector bar to display the phone keypad.
- 2 Tap  to open the recent calls menu.
- 3 Tap **Answered calls**, **Missed calls**, or **Dialled calls** to view the corresponding call list.
- 4 Tap an entry to call the entry's number.

Calling With Turbo Dial

You can store up to 9 frequently used phone numbers in the turbo dial list, then dial the numbers by tapping and holding a single keypad number key.

To turbo dial a phone number:



- 1 Tap  in the top application selector bar to display the phone keypad.
- 2 Tap and hold a keypad key to dial the phone number assigned to the key.

Calling Features



If no number is stored, your phone prompts you to store a phone number in the turbo dial list.

To setup the turbo dial numbers list:

- 1 Tap  in the top application selector bar to display the phone keypad.
- 2 Tap , then tap **Setup** to open the setup menu.
- 3 Tap **Turbo dialling** to open the turbo dial list.
- 4 Enter phone numbers in the turbo dial list.

Calling Features

Putting a Call On Hold

During a call, tap **Hold** to put the call on hold. Tap **Hold** again to resume the call.

Muting a Call


During a call, tap **Mute** to turn off your phone's microphone. Tap **Mute** again to resume the call.



Dialing Another Number During a Call




During a call, you can make a call to another phone number.


- 1 Tap the keypad button  to display the phone keypad.
- 2 Tap the keypad keys to dial the phone number.
- 3 Tap **Send** to make the call.

When the new call connects, the first call is put on hold while you talk to the third party.

To switch between the 2 calls:

- 1 Tap , then tap **Switch** to put the current active call on hold and switch to the other call.
- 2 Tap **End** to end the current active call.

Calling Features

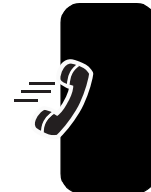



Transferring a Call



You can announce that you are transferring an active call to another party, or you can directly transfer the call.

Announce the Call Transfer

During a call:


- 1 Tap **Hold** to put the call on hold.
- 2 Tap the keypad button  to display the phone keypad.
- 3 Tap the keypad keys to dial the number where you are transferring the call.
- 4 Tap **Send** to make the call and speak to the person who answers.
- 5 Tap , then tap **Place on hold**.

Calling Features



Do Not Announce the Call Transfer

During a call:

- 1 Tap , then tap **Transfer**.
- 2 Tap the keypad keys to dial the number where you are transferring the call.
- 3 Tap **Send** to transfer the call.

Messages



You can send and receive short text-based SMS messages, and multimedia MMS messages containing media objects such as photos, pictures, animations, sounds, voice records, and video clips.


You can use instant messaging to exchange messages in real time with other wireless phone users.

Using the Message Center

Note: You must set up your message inbox **before** you can send and receive messages. Usually, your service provider has already set up the message inbox for you. For setup instructions, see page 79.

Tap  in the top application selector bar to go to the message center (shown at right).

Your messages are stored in different folders in the message center. The number to the right of each folder name indicates the number of messages it contains. Tap a folder to display its contents.

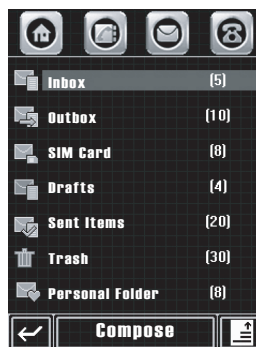

Messages



The message center contains the following folders:

Inbox – Stores SMS and MMS messages you have received.

Outbox – Stores your SMS messages that have not yet been sent.

SIM Card – Contains SMS messages stored on your SIM card. You can move these messages to other folders.

Drafts – Temporarily stores messages that you are still writing.

Sent Items – Stores copies of SMS messages you have sent.

Trash – Stores messages you have deleted. If you have not permanently deleted a message, you can retrieve it.



Personal Folder – A personal folder that you can rename and use as desired.

Setting Up Your Signature

You can store your signature, and manually or automatically append it to the messages you send.

Messages



- 1 Tap  in the top application selector bar to go to the message center.
- 2 Tap , then tap **Signature Editing** to open the signature editing screen.
- 3 Tap the direct line in the **Signature Content** field to enter your signature.



- 4 If you want your phone to automatically append your signature to all outgoing SMS messages, tap the check box ☐ below the signature. A check mark ☒ indicates that automatic signature is activated.
- 5 Tap **Done** to store your signature.


Sending a Text Message



You can send an SMS *short text message* to other wireless phone users, and to email addresses.

To compose and send an SMS message:


- 1 Tap  in the top application selector bar to go to the message center.
- 2 Tap **Compose**.
- 3 Tap the *message type* pull-down menu, then tap **SMS** to open the SMS message composition screen.
- 4 Tap , then tap a text entry method to enter text in the message field.

Alternatively, you can tap , then tap **Load** to insert a prewritten quick text note in the message field.

- 5 To enter the message recipient(s), tap **To** to select numbers or addresses from your address book, or tap the direct line in the **To** field to enter a phone number or email address.
- 6 Tap **Send** to send the message.

Messages



When composing an SMS message, you can tap  to perform various operations on the message prior to sending it. The SMS menu can include the following options:

Option	Description
Load	Insert a quick text note or auto-signature in the message.
Save to	Save the message to the Draft folder, or save it as a quick text note.
Send options	Receipt request: Request a delivery report or read report for the message. Expire after: Set the expiration time for an undelivered message.
Delete	Delete the message.

Sending a Multimedia Message

Messages



For instructions on how to send an MMS multimedia message, see page 31.



Viewing the Status of Unsent Messages

Outgoing SMS messages that failed to send or have not yet been sent are stored in the outbox.

On the message center screen, tap **Outbox** to display its contents. Messages in the outbox are sorted from newest to oldest.

Tap a message to read it. You can edit the message while it is open.

Tips For Sending Messages

- When you enter an SMS text message, a counter at the top right corner of the display shows the number of characters left on the current page, and the number of pages you have written (*character #/page #*).
- When you enter an MMS multimedia message, a counter at the top of the display shows the current message size in kilobytes. Another counter shows the number of pages.
- When you manually enter phone numbers and/or email addresses in the **To** field, you must insert a comma between each entry.


Receiving a Message



Your phone displays the  **Prompt** icon in the top application selector bar to notify you that you have received a new SMS or MMS message.







Messages

Tap  to display message details (sender, subject, time, and size).

For an SMS message, tap **Read** to read the message. Tap **Dismiss** to return to the previous screen without reading the message. The message is stored in the inbox.

For an MMS message:

- Tap  or  to display message details (sender, subject, time, and size).
- Tap  to play the message.
- Tap **Reply** to send an MMS reply to the message.
- Tap  to perform various operations on the message. The received MMS message menu can include the following options:

Option	Description
Reply By SMS	Send an SMS reply to the message.
Save File	Save a media object in the message.
Save As Quick Card	Save the current MMS page as a quick card. You can insert the quick card into MMS messages that you compose.
Move To Folder	Move the message to another message center folder.
Delete Message	Delete the message.

Messages





When your phone displays **Memory is Full!**, you must delete some existing messages from your inbox, outbox, or drafts folder to receive new messages.


Reading and Replying to Messages

Messages that you receive are stored in the inbox.

On the message center screen, tap **Inbox** to display its contents. Messages in the inbox are sorted from newest to oldest.

Tap a message to read it. Your phone displays the sender's name (if stored in your address book) or phone number, the message contents, and the time it was sent.

- Tap  to call the sender.
- Tap **Reply** to send an SMS or MMS reply to the message (depending on the received message type).
- Tap  to return to the previous screen without making any changes.

Tap  to perform various operations on the message. The received SMS message menu can include the following options:

Option	Description
Forward	Open a copy of the message, with an empty To field.
Save address	Save the sender's phone number or email address.

Messages



Option	Description
With content	Include a copy of the original message in your reply.
Move to folder	Move the message to another folder.
Delete message	Delete the message.

Storing an Object From a Multimedia Message




To store a media object contained in a multimedia message, tap and hold the object to open a pop-up menu, then select **Save** to store the object on your phone.

If the object is contained in a message attachment, tap the attachment and select **Save** to store the object.

Viewing Messages

Messages

On the **Inbox**, **Outbox**, or **Trash** screen, tap , then tap **Sort by** to select a view mode. You can choose to view messages by **Name**, **Subject**, or **Time**.

Viewing Draft Messages



Messages that you are still writing are stored in the drafts folder.

On the message center screen, tap **Drafts** to display its contents. Tap a message to read it. You can edit the message while it is open, and then send it immediately.

Viewing Deleted Messages

Messages that you delete are stored in the trash folder.

On the message center screen, tap **Trash** to display its contents. Tap a message to read it. You can edit the message while it is open.

Tap **Delete all** to permanently delete all messages in the trash folder.

Viewing Messages on Your SIM Card

On the message center screen, tap **SIM card** to display the messages stored on your SIM card. Tap a message to read it. You can edit the message while it is open.

Messages





76

Creating and Using a Personal Folder

You can create one or more personal folders to store your messages, and lock your personal folders to prevent other users from reading the messages stored in them.


To create a personal folder:


- 1 Tap  in the top application selector bar to go to the message center.
- 2 Tap , then tap **New folder**.
- 3 Tap the direct line in the **Name** field to enter a name for the folder.
- 4 To lock the folder to prevent unauthorized access, tap the check box ☐ below the name to **Protect by phone lock code**. A check mark ☒ indicates that the folder lock feature is activated.
- 5 Tap **Done** to save the folder.

The personal folder is listed on the message center screen along with your other folders. If the personal folder is locked, your phone prompts you to enter the phone unlock code when you try to open the folder. Enter your unlock code to open the folder.

Messages



To edit a personal folder, open it and tap , then tap **Folder setup**. You can change the folder name, and turn the folder lock feature on or off as desired.


To delete a personal folder, open it and tap , then tap **Delete folder**. Tap **OK** to confirm the deletion.

Note: You must remove all messages from a personal folder in order to delete it.

Moving Messages Between Folders

You can move messages between folders as desired. For example, you can move a message from the inbox to the SIM card folder and take it with you when you use your SIM card in another phone, or move it to a locked personal folder to prevent others from reading it.


 
To move a message to a new folder:

- 1 Tap  in the top application selector bar to go to the message center.
- 2 Open the folder that contains the message you want to move.
- 3 Tap and hold the message to open a pop-up menu, then select **Move to folder**.
- 4 On the move to folder screen, select the folder to which you want to move the message.
- 5 Tap **OK** move the message to the selected folder.

Messages



Setting Up the Message Inbox

- 1 Tap  in the top application selector bar to go to the message center.
- 2 Tap , then tap **Service setup**.
- 3 Tap **Short message** or **Multimedia msg** to configure your SMS or MMS inbox settings as described below.
- 4 When you are finished, tap **OK** to save your settings.

SMS Setup Options

Note: Actual field names and values may vary depending on the technologies available to your service provider. Some settings may not be available for all phone models.

Option	Description
Service number	Number of the service center that handles your outgoing text messages.
Expire after	Number of days your network should attempt to send undelivered text messages.
Use GPRS	Use a high-speed GPRS connection to send and receive text messages.

Messages



MMS Setup Options

Note: Actual field names and values may vary depending on the technologies available to your service provider. Some settings may not be available for all phone models.




Option	Description
Default Profile	Select an MMS network profile. (See next section to edit profile settings or create a new profile.)
Expire after	Number of days your network should attempt to send undelivered MMS messages.
Max. size	Maximum size of incoming multimedia message to be downloaded to your phone.
Auto download	Set auto download on or off and choose download options.
Show my number	Send your number with outgoing MMS messages.
Delivery report	Send a delivery report for an incoming MMS message when requested.
Block senders	Block incoming MMS messages from specific senders.

MMS Network Profile Setup

You can edit an existing MMS network profile or create a new MMS network profile.

Messages

80

- 1 Tap  in the top application selector bar to go to the message center.
- 2 Tap , then tap **Service setup**.
- 3 Tap **Multimedia msg** to open the MMS inbox setup editor.
- 4 Tap **Default Profile** to open the MMS profile list.
- 5 Tap an existing MMS network profile to edit its settings, or tap  to create a new MMS profile.
- 6 When you are finished, tap **Done** to save your settings.

You must enter the following configuration settings. If necessary, contact your service provider to obtain the following information:

Option	Description
Profile name	Enter the profile name.
MMSC	Select the server you want to use (information may be viewable only).
Network profile	Select a network connection profile to connect to the Internet.
WAP Gateway	Gateway address for your WAP service provider.
Conn. Security	Set connection security level.
Conn. Type	Set connection type.

Messages




Using Instant Messaging



Use *instant messaging* to exchange messages in real time with other wireless phone users. The messages you send display immediately on the other users' phones.


Logging In To IM

- 1 Tap  IM in the main screen to open the IM login screen.
- 2 Tap the direct line in the **User ID** field to enter your IM user ID.
- 3 Tap the direct line in the **Password** field to enter your password.

Tip: To have the phone remember your password for future logins, tap the check box ☐ next to **Remember Password**. A check mark ☒ indicates that the remember password feature is activated.

- 4 Tap **Login** to log in to instant messaging.

Your contact list is sorted by online status:

- **Online Contacts** are logged in to IM. Tap a contact's name to send the person a message. A  (busy) indicator shows that someone is busy and unable to respond.
- **Offline Contacts** are logged out of IM. You can tap a contact's name to send a message, in case the person has logged in since you refreshed your list.

Messages



Note: To refresh your contact list, tap **Refresh** while viewing the list.

Sending and Receiving Instant Messages

When you log in to IM, you can exchange messages with other IM users.


Tap a contact's name to open a conversation in progress, or start a conversation with a person. Tap **Write IM**, then tap a text entry method to enter message text. Tap **Send** to send the message.

Setting Your Online Status

When you log in to IM, your online status is visible to other IM users. To set your online status, tap **My Status**, then select **Available**, **Busy**, or **Invisible**.

Setting Up IM

Adding and Removing Contacts


To add a buddy to your contact list, go to the contact list, tap , then tap **Add Buddy**. Enter the new buddy ID and tap **OK**. IM returns an error if it cannot add the buddy to your contact list.

To remove a name from your contact list, tap and hold the name and select **Delete Buddy**.

Messages



Setting Your Busy Status

If you are logged in to IM but not responding to new messages, you can set the  (busy) indicator to display next to your name in everyone else's contact list. On the startup IM online screen, tap **My Status**, then tap **Busy**.

Note: The startup IM online screen displays when you log in.

Logging Out of IM

Tap **Log Out** from the IM online screen.



Email




You can send and receive email messages with your wireless phone.

Tip: You must have an Internet connection to send and receive email messages. If necessary, see page 152 for information on how to set up a network connection profile.

Using Mailboxes and Folders

Note: You must set up your email mailbox **before** you can send and receive email messages. Usually, your service provider has already set up the email mailbox for you. For setup instructions, see page 89.

Tap  **Email** in the main screen to launch the email application.

Email messages are stored in different folders in your email mailbox.

Email

Inbox – Email messages you have received.

Outbox – Your email messages that have not yet been sent.



You may have additional folders in an email mailbox, such as **Drafts**, **Sent Items**, **Trash**, and/or personal folders that you create.

If you have separate mailboxes for different email accounts, tap the **Mailbox** field at the top of the email message screen to select the mailbox you want to use. Your phone displays the folders associated with the selected mailbox.

Sending an Email Message





You can send an email message to one or more recipients. You can manually enter each recipient's email address, or select addresses from the address book.

When you manually enter email addresses, you must insert a comma, semicolon, or colon between each address.


To compose and send an email message:

- 1 Tap **Email** in the main screen to launch the email application.
- 2 Tap to open the email message composition screen.
- 3 To enter the message recipient(s), tap **To** to select numbers or addresses from your address book, or tap the direct line in the **To** field to enter a phone number or email address.
- 4 Tap the direct line in the **Subject** field to enter a subject for the message.
- 5 Tap , then tap a text entry method to enter text in the message field.

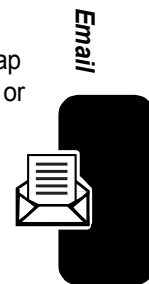

Alternatively, you can tap , then tap **Insert Quick Text** to insert a prewritten quick text note in the message field.

6 Tap **Send** to send the message.

When composing an email message, you can tap  to perform various operations on the message prior to sending it. The email message menu can include the following options:

Option	Description
Save	Save the message to the Drafts folder.
Insert Signature	Append your signature to the end of the message.
Insert Attachment	Attach a contact, calendar event, task, or media object to the message.
Delete Attachment	Delete message attachments.
Show Cc/Bcc	Display Cc and/or Bcc header fields to carbon-copy or blind-carbon-copy the message to additional recipients.
Setup Priority	Set message priority.



Email




Receiving an Email Message

Email messages that you receive are stored on your service provider's email server until you download them to your phone.

Your phone displays the  **Prompt** icon in the top application selector bar to notify you that you have received a new email message.

Tap  to display message details (sender, subject, time, and size). Tap **Download** to download the message to your phone. Tap  to return to the previous screen without downloading the message.

When you download an email message:

- Tap  to display message details (sender, subject, time, and size).
- Tap the message to read it.
- Tap **Reply** to send an email reply to the message.

Reading, Copying, or Moving Email Messages

The procedures for reading, copying, or moving email messages are similar to the corresponding message center procedures. See page 68 for more information.




Creating and Using a Personal Folder

The procedures for creating and using a personal folder are similar to the corresponding message center procedures. See page 77 for more information.

Setting Up the Email Mailbox

If the phone cannot locate your email mailbox, it opens the mailbox setup screen for you to configure your mailbox settings.

Automatic Mailbox Setup

- 1 Select your email service provider from the mailbox setup list, then tap **OK**.
- 2 Enter your **User name** and **Password** in the appropriate fields, confirm your password in the **Re-enter password** field, then tap **OK**.
- 3 To edit email sending, receiving, and/or signature options, tap  and select **Mailbox Setup**. Reenter your password, then enter settings as described in the following section.

Email



Manual Mailbox Setup

If your service provider is not listed on the mailbox setup list, you can manually set up your email mailbox as follows:

- 1 Tap **Setup manually**, then tap **ok** on the mailbox setup screen to manually enter email settings.

- 2 Tap the **Mailbox name** field and enter your mailbox name.
- 3 Tap **Send setup** and **Receive setup** to configure your email sending server and receiving server settings as described below.
- 4 Tap **Signature setup**, then tap the direct line in the **Signature editing** field to enter your signature.
- 5 If you want your phone to automatically append your signature to all outgoing email messages, tap the check box ☐ below the signature. A check mark ☒ indicates that automatic signature is activated.
- 6 Tap **OK** to save your signature.
- 7 Tap **OK** to store your mailbox settings.

Tip: You can set up separate mailboxes for different email accounts. If you do not assign a name on the mailbox setup screen, your phone assigns a different name to each mailbox.

Send Setup Options

Note: Actual field names and values may vary depending on the technologies available to your service provider. Some settings may not be available for all phone models.

Setting	Description
Server	IP address or host name that handles your outgoing email.
Port	Port number for sending host.
Email	Your email address.

Email



Setting	Description
Nickname	Name to be inserted before your return address, if desired.
Authentication	<p>Set Authentication to On if you need a user name and password to access your outgoing email server.</p> <p>Select Same as Receive setup if user name and password are the same as for your incoming email server.</p> <p>Otherwise, enter your outgoing email server User name and Password, and confirm your password in the Re-enter password field.</p>

Receive Setup Options

Note: Actual field names and values may vary depending on the technologies available to your service provider. Some settings may not be available for all phone models.

Email



Setting	Description
POP3 or IMAP	Select the protocol to communicate with the receiving host: POP3 or IMAP .
Server	IP address or host name that handles your incoming email.
Port	Port number for receiving host.

Setting	Description
User name	Your user name.
Password	Your user password.
Re-enter password	Confirm your user password.
Keep	Select to save copies of your email messages on the remote server. (For POP3, prevents message deletion on remote server after message is downloaded to your phone. For IMAP, prevents message deletion on remote server after message is deleted on your phone.)
Incoming messages size limit	Maximum size of an email message to be downloaded to your phone.



Email



Setting Up Your Address Book

You can store a contact list of names, phone numbers, and email addresses in your phone's electronic address book.

Viewing Your Contact List

To see the names in your address book, tap  in the top application selector bar to open the address book. To change the way your contact list is displayed, tap  and select **List view** or **Thumbnail view**.

Using Category Views

Defining categories for your contacts helps you manage address book information. You can classify contacts in different categories according to your communication needs, and display contacts by category. Your phone provides the following basic categories:

All – Lists all contacts from all categories.

Unfiled – Lists contacts that are not classified. This is the default category setting for new contacts.

SIM card – Lists contacts stored on your SIM card.

When the contact list is displayed, tap the *category* button in the bottom button bar and select a category name to display only the contacts in that category.




Viewing and Editing Contact Details

- 1 When the contact list is displayed, tap a contact name to view its details.
- 2 Tap **Edit** to edit the contact. Your phone displays complete contact details.
- 3 To edit contact information, tap the direct line in the field you want to edit.
- 4 When you are finished editing contact information, tap **Done** to store your changes and return to the contact list.



Setting Up Your Address Book

Adding a New Contact

- 1 Tap  in the top application selector bar to open the address book.
- 2 Tap , then tap **New contact**.
- 3 On the new contact screen (shown at right), tap  to assign a picture ID to the entry. Your phone displays the picture when you receive a call from this contact.
- 4 Tap the direct line in a field to enter contact details. Pull down the scroll bar to display additional fields.





Setting Up Your Address Book

- 5 To set a distinctive ring tone for the contact, tap the **Tone** field and select a ring tone. Your phone sounds the tone when you receive a call from this contact.

Note: The **Tone** option is not available for contacts stored on the SIM card.



- 6 When you are finished entering information, tap **Done** to store the contact.

Tip: To store a contact on the SIM card, tap **Cat.** to set the category, then tap **SIM** to store the contact to the SIM card. Your phone removes the information fields that cannot be stored on the SIM card.




Tip: Tap  to exit without storing the contact.

Creating a Group

You can create a group mailing list consisting of multiple contacts stored in the address book. Groups make it easy for you to send a message to multiple recipients simultaneously.

- 1 Tap  in the top application selector bar to open the address book.
- 2 Tap , then tap **New SMS group**, **New MMS group**, or **New Email group**. You must enter a name for the group, and the group must contain at least one member.
- 3 When you are finished entering information, tap **OK** to store the group.

Calling or Sending a Message to a Contact

- 1 Tap  in the top application selector bar to open the address book.
- 2 Tap a contact name to view its details.
- 3 In the details list:
 - Tap the phone number to call the number.
 - Tap the phone number next to the message indicator  to send an SMS or MMS message to the number.
 - Tap the email address next to the email indicator  to send an email or MMS message to the address.



Setting Up Your Address Book

Calling a Contact with Fast Dial

For a contact stored in phone memory, you can store multiple phone numbers for a single contact (such as mobile, home, and work numbers). You can set one number as the fast dial number for the contact.


Note: If you do not set a fast dial number for a contact, the default fast dial number is the first valid phone number that appears in the contact details list.

To call the contact's fast dial number, simply tap and hold the contact name.




 
Setting Up Your Address Book

To set the fast dial number for a contact:

- 1 Tap the contact name to view its details.
- 2 Tap **Edit** to edit the contact. Your phone displays complete contact details.
- 3 Tap , then tap **Select fast dial**.
- 4 Your phone displays the phone numbers stored with the contact. Select the number you want to set as the fast dial number, then tap **OK**.
- 5 Tap **Done** to store the setting.


 
Setting a Category Ring Tone

You can set a distinctive ring tone for an address book category. Your phone sounds the tone when you receive a call from a contact in the category.

- 1 Tap  in the top application selector bar to open the address book.
- 2 Tap , then tap **Category settings**.
- 3 Tap the **Categories** field and select the category.
- 4 Tap the **Ring tone** field and select a ring tone.
- 5 Tap **OK** to store your settings.


Note: A ring tone for an individual contact overrides the category ring tone.

Searching for a Contact


 
- 1 Tap  in the top application selector bar to open the address book.
- 2 Tap , then tap **Find contacts**.
- 3 Select **Contact name**, **Number**, or **Other**, enter the desired information in the **Find for** field, then tap **Find**.

Your phone displays the search result, or notifies you that no match can be found.

To continue searching, tap **Find new**.

To return to the contact list, tap .

Deleting a Contact

- 1 Tap  in the top application selector bar to open the address book.
- 2 Tap , then tap **Delete contacts**.
- 3 Check the contact(s) you want to delete, then tap **Delete**.
- 4 Tap **OK** to confirm the deletion.





Setting Up Your Address Book

Copying Contacts

You can copy contacts between your phone and SIM card. This procedure does **not** delete the original contact.



Note: The SIM card can only store one phone number per contact; it cannot store multiple phone numbers and personal information for a single contact. When you copy an entry from the phone to the SIM card, your phone prompts you to specify the number you want to store for the contact.

- 1 Tap  in the top application selector bar to open the address book.
- 2 Tap , then tap **Copy to**.
- 3 Select **Phone to SIM** or **SIM to phone**, then tap **OK**.
- 4 Check the number(s) you want to copy. If you copy from the SIM card to phone memory, specify the number type.
- 5 Tap **OK** to copy the numbers to the new location.

Note: The number of entries you can store on your SIM card depends on the SIM card capacity. The types of entries that can be copied to the SIM card may vary depending on the function of the SIM card.



Checking Address Book Capacity

You can display the number of address book entries currently stored on the phone and SIM card, and the total number of entries you can store on the SIM card.

- 1 Tap  in the top application selector bar to open the address book.
- 2 Tap , then tap **Memory status**. Your phone displays the number of phone and SIM card contacts, and the SIM card capacity (*number of contacts*).
- 3 Tap **OK** to return to the address book.

Sharing Contact Information

You can share contact information with others by sending the data as a vCard to another phone, computer, or hand-held device.

- 1 Tap  in the top application selector bar to open the address book.
- 2 Tap the name of the contact you want to send. Your phone displays contact details.
- 3 Tap , then tap **Share via**.
- 4 Tap **Bluetooth**, then tap **OK** to exchange the data through a Bluetooth® wireless connection. Tap **MMS** or **Email**, then tap **OK** to send the contact data in an MMS or email message.



Setting Up Your Address Book




 
- 5 Complete the setup procedure for the transfer method you selected.
- 6 Tap **Send** to send the contact information in a vCard.

For more information about using a Bluetooth wireless connection, see page 37.

Setting Up Your Address Book

Viewing and Editing Owner's Information


You can store information about yourself in the address book. Then, if you lose your phone, the person who finds it can contact you to return the phone.


- 1 Tap  in the top application selector bar to open the address book.
- 2 Tap , then tap **Owner Info**.
- 3 If owner's information is stored, the phone displays the owner's contact details. Tap **Edit** to edit the owner's information.
- 4 If owner's information is not stored, the phone displays the owner's information entry screen. Enter information as you would for a new contact (see page 94.)
- 5 When you are finished entering information, tap **Done** to store the owner's information.

Personalizing Your Phone

Setting the Display Language


Set the language in which phone features and menu options are displayed.

- 1 Tap  **Setup** in the main screen, then tap **Language**.
- 2 Select the language you want to use, or select **Automatic** to let your phone select the language based on your current location.
- 3 Tap **Done** to save your language selection.

Tip: Tap  to return to the setup screen without saving your changes.

Setting Sound Volume

Set the volume of your phone's system sounds, incoming call ring tones, and event notification alerts. You can also set the volume of the integrated stereo speakers, and activate and adjust audible feedback settings for the touchscreen display.

- 1 Tap  **Setup** in the main screen, then tap **Sound volume**.
- 2 Tap an item to open its sound setup screen.



Personalizing Your Phone

3 Adjust the sound volume, and any other sound-related settings (if available).


4 Tap **Done** to save your settings.

Tip: Tap ↶ to return to the setup screen without saving your changes.

Adjusting Text Input Settings




Adjust settings related to entering text characters on the touchscreen display. You can set your preferred input method, primary and secondary language preferences, specify your writing hand (left or right) and handwriting speed, activate word recognition and a user dictionary, and apply a watermark to the text you enter.

Tap  **Setup** in the main screen, then tap **Input setting** to open the input setting screen. Adjust settings as necessary, then tap **Done** to save your settings and return to the setup screen.

Calibrating the Touchscreen Display


You should re-calibrate the touchscreen if the phone begins to respond incorrectly to your stylus input on the touchscreen display.

1 Tap  **Setup** in the main screen, then tap **Screen calibration**.

- 2 Follow the onscreen instructions and tap the center of the symbol with your stylus as instructed, until the phone indicates that the touchscreen display is properly calibrated.

Resetting All Options

Reset all options back to their original factory settings, **except** for the unlock code, security code, and lifetime timer.

- 1 Tap  **Setup** in the main screen, then tap **Master reset**.
- 2 Enter your security code when prompted, and then tap **OK**.
- 3 Tap **OK** to confirm that you want to perform master reset.

Tip: Tap **Cancel** to exit without performing the master reset procedure.

Clearing All Stored Information


Clear all user settings and entries, **except** for information stored on the SIM card, erase all downloaded pictures and sound files, and reset all options back to their original factory settings, **except** for the unlock code, security code, and lifetime timer.



Personalizing Your Phone

Caution: Master clear **erases all user-downloaded content and user-entered information** stored in your phone's memory, including address book and calendar entries. After you erase the information, you cannot recover it. Master clear does **not** delete any information stored on the SIM card.





- 1 Tap  **Setup** in the main screen, then tap **Master clear**.
- 2 Enter your security code when prompted, and then tap **OK**.
- 3 Tap **OK** to confirm that you want to perform master clear.

Tip: Tap **Cancel** to exit without performing the master clear procedure.


Getting More Out Of Your Phone

Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

- 1 Tap  **Recent** in the main screen to display the recent calls screen.
- 2 Tap **Answered calls**, **Missed calls**, or **Dialled caller** to view the corresponding call list.
- 3 Tap an entry to display call details.
- 4 Tap **Call** to call the entry's number, or tap  to perform various operations on the entry:

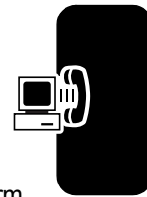

Option	Description
Store	Create an address book entry with the number stored in the number type field you specify.
Send Message	Open a new message with the number in the To field.
Delete	Delete the entry.



Making a Conference Call



Connect an active call and a call on hold so that all parties can speak to each other.



- 1 Tap  in the top application selector bar to display the phone keypad.
- 2 Tap the keypad keys to dial the first party's number.
- 3 Tap **Send** to make the call.
- 4 When the call connects, tap the keypad button  to display the phone keypad.
- 5 Tap the keypad keys to dial the next party's number.
- 6 Tap **Send** to make the call.
- 7 When the call connects, tap **Link** to connect the 2 calls.

Tip: Repeat steps 4 to 7 to add additional parties to the conference call.

Forwarding Calls



Forward your phone's incoming voice, fax, and/or data calls directly to another phone number.


- 1 Tap  in the top application selector bar to display the phone keypad.
- 2 Tap , then tap **Setup** to open the phone setup menu.

- 3 Tap **Call divert**, then select the type of calls you want to forward: **Voice calls**, **Fax calls**, or **Data calls**.

The forwarding options for voice calls are:

Option	Description
All voice calls	Forward all calls.
When unavailable	Forward calls if your phone is unavailable.
When busy	Set a forwarding number for when your phone is busy (voice calls only).
When unreachable	Set a forwarding number for when your phone is out of range (voice calls only).
When no answer	Set a forwarding number for when you are unable to answer (voice calls only).
Cancel all diverts	Do not forward calls.

Note: Repeat this procedure to enter forwarding information for other call types. Fewer forwarding options are available for fax calls and data calls.

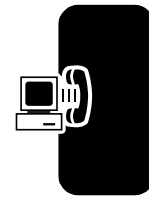


Getting More Out Of Your Phone

Barring Calls



Use call barring to restrict outgoing or incoming calls. You can restrict all calls, calls to international numbers, or calls while roaming.

- 1 Tap **Security** in the main screen, then tap **Call barring**.
- 2 Tap **Outgoing calls** or **Incoming calls** to select a restriction setting for outgoing or incoming calls.
- 3 Enter your call barring password when prompted, then tap **OK**.
- 4 Tap **Done** to save your settings.

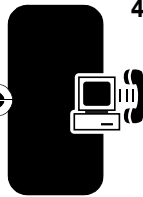

Getting More Out Of Your Phone

109



Using Fixed Dialing

When you turn on fixed dialing, you can only call, send messages, and send data to numbers stored in the fixed dial list. Use this feature to limit outgoing calls, messages, and data transmissions to a predefined list of numbers, country codes, area codes, or other prefixes.

- 1 Tap **Security** in the main screen, then tap **Fixed dialling**.
- 2 Enter your SIM card PIN2 code when prompted, then tap **OK**. Your phone displays the fixed dial list, and indicates whether fixed dial is currently turned **On** or **Off**.
- 3 Tap **On** or **Off** to turn fixed dialing on or off.

4 Tap **Done** to save your settings.

Fixed dial entries are stored on your SIM card. When fixed dialing is turned on, your address book displays only contacts stored in phone memory, and entries stored on the fixed dial list.



You create and edit a fixed dial entry just like an address book contact.


Monitoring Phone Use

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing **End**. This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

To view and adjust phone call meters:

- 1 Tap  in the top application selector bar to display the phone keypad.
- 2 Tap , then tap **Setup** to open the setup menu.
- 3 Tap **Call meters** to open the call meters menu.

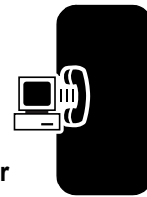


Getting More Out Of Your Phone

Viewing and Resetting Call Timers and Cost Trackers



The following call timers and cost trackers display on the call meters menu:

Option	Description
Total call costs	Amount spent on dialed and received calls since the last time you reset the cost tracker.
Total call time	Approximate total time spent on dialed and received calls since the last time you reset the call timer.
Call lifetime	Approximate total time spent on all calls on this phone. You cannot reset this timer.

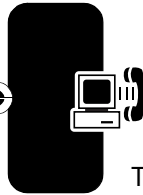

Getting More Out Of Your Phone




To reset the call timer, tap **Clear Call time**.


To reset the cost tracker, tap **Clear call costs**.

Using a Timer During a Call

To set a timer to beep at specified intervals during a call, tap **Audible timer** and select one of the following options: Off, 1 min, 5 mins, 10 mins, or 15 mins.

To display time or cost information during a call, tap **Display** and select one of the following options:

Option	Description
Timer	Display the approximate elapsed time for the current call.
Costs	Display the cost of the current call (if you subscribe to a call cost option or advice of charge). 
Total cost	Display the cost of all calls since the last time you reset the cost tracker (if you subscribe to a call cost option or advice of charge). 
Credit	Display how much credit you have left (if you subscribe to a call cost option or advice of charge). 
Off	No in-call timer display.

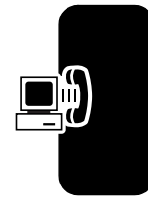

Getting More Out Of Your Phone

Adjusting Call Cost Settings



You can set a credit limit so that the phone displays your remaining credit during calls. The phone notifies you when you near your limit, and ends the call when you reach it.

Tap **Call cost setup**, and enter your SIM PIN2 code to open the cost setup menu.

You can enter a credit limit, and set the phone to display your remaining credit in time units or as a currency value.

Viewing Credit Information



If you subscribe to an advice of charge option, tap **Available credit** to view the amount of credit available.

Using Handsfree Features



Your phone includes an integrated handsfree speaker that you can use for handsfree applications. For instructions on how to use the handsfree speaker, see page 50.

You can also purchase an optional Motorola Original™ handsfree car kit, speakerphone, or headset for your phone. These accessories provide alternative ways for you to use your phone without using your hands.

If the accessory supports Bluetooth® wireless connections, you can setup a Bluetooth wireless link with your phone (see page 37).



Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.


Adjusting Bluetooth® Accessory Settings

If a Bluetooth headset or car kit accessory supports remote volume control, you can use your phone's volume keys to set the device's speaker volume during a handsfree call.

Activating Auto Answer

Set your phone to automatically answer calls after ringing a few seconds when using the handsfree speaker, or when the phone is connected to a headset, car kit, or external speakerphone.

- 1 Tap  in the top application selector bar to display the phone keypad.
- 2 Tap , then tap **Setup** to open the phone setup menu.
- 3 Set **Auto answer** to **On** to activate auto answer.
- 4 Tap **Done** to save the setting.

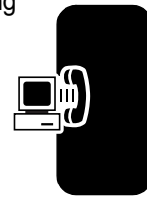


Getting More Out Of Your Phone

Sharing Information

You can share information with another phone, computer, or hand-held device. You can share address book entries, calendar events, tasks, note pad entries, voice records, pictures, photos, and sound files by sending or receiving the data through a Bluetooth wireless connection, or in an MMS or email message.

Sending Data

- 1 Select the data you want to send, tap and hold it or tap , then tap **Share** to display a list of share options.
- 2 Tap **Bluetooth**, then tap **OK** to exchange the data through a Bluetooth wireless connection. Tap **MMS** or **Email**, then tap **OK** to send the data in an MMS or email message.
- 3 Complete the setup procedure for the transfer method you selected.
- 4 Tap **Send** to send the data.

For more information about using a Bluetooth wireless connection, see page 37.

Receiving Data

The sending device must establish a transmission link with your phone through a Bluetooth, MMS, or email connection.

Note: If necessary, activate Bluetooth on your phone to let the other device establish a wireless link.

Your phone alerts you when it receives a data transfer request from the other device. If necessary, tap **OK** to accept the data.

Your phone notifies you when data transfer is complete. If the transfer is not successful, your phone displays the message **Failed to Receive**.

Using Sync




You can synchronize your phone and SIM address book entries, calendar events, and tasks with another phone, computer, or hand-held device using a cable connection, or with an Internet server using an *over-the-air* (OTA) connection.

Using a Cable Connection

Notes:




- To transfer data between your phone and computer, you must install the software included with the Motorola Original data kit. See the data kit user's guide for more information.
 - You can synchronize data between your phone and external device with BVRP mobile PhoneTools software, an accessory for Motorola phones. See the mobile PhoneTools user's guide for more information.
- BVRP mobile PhoneTools software is designed to synchronize with basic features of many popular Personal Information Management (PIM) software and hardware products.

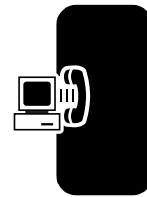


Getting More Out Of Your Phone

- Due to a known Microsoft® Windows® USB driver issue, a computer running Windows 2000 with Service Pack 1 or Service Pack 2 will not recognize a memory card inserted into your phone when you attempt to transfer or synchronize data between your phone and computer through a USB cable connection.

Use a Motorola Original USB cable to connect your phone to the external device. Plug the cable into the USB connector port on your phone as shown. Plug the other end of the cable into the USB port on the device.

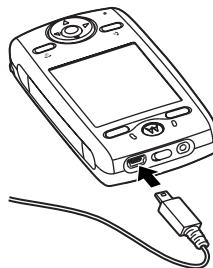

Note: Not all devices are compatible with a cable connection. Check your computer or hand-held device to determine the type of cable you need.

Tap  **Sync** in the main screen, then tap **USB cable**.

Your phone notifies you when data synchronization is complete, and displays a sync information screen. If synchronization is not successful, your phone displays the message **Sync Failed**.

Using an OTA Connection




You must create an Internet sync partner to synchronize your data over an OTA connection.

Tap **Sync** in the main screen, tap , then tap **OTA Setup** to configure your OTA connection settings as follows:

Option	Description
Paths	Locations and names of the folders (beneath the URL path) where your Address book , Cal. , and Tasks data files are stored on the server.
Use proxy	The IP and Port of the proxy.
Server URL	The URL for the server (you can omit http://).
User	User name to log on to the server.
Password	Password to log on to the server.
Re-enter	Re-enter your password to log on to the server.

To synchronize phone data with your Internet sync partner, tap **Sync** in the main screen, then tap **OTA**.

Your phone attempts to make a sync connection with the sync partner. This might take several minutes, if there are many entries to synchronize.

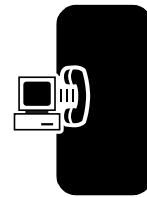

Getting More Out Of Your Phone

Your phone notifies you when data synchronization is complete, and displays a sync information screen. If synchronization is not successful, your phone displays the message **Sync Failed**.

Using a Modem Connection




You can use your phone as a modem, to connect your computer to the Internet or transfer data to/from the computer. To use the phone as a modem, you must connect it to the computer using a cable connection or wireless Bluetooth connection.

Tip: To connect your phone to the computer through a Bluetooth connection, make sure that your computer supports Bluetooth and has the correct drivers installed.

To access the Internet through a data call, configure the phone modem just as you would a standard computer modem.

Getting More Out Of Your Phone

119

- 1 Tap  **Modem** in the main screen to display the modem setup screen.
- 2 Tap **Use** to select **USB** or **Bluetooth** as your connection method.
- Tip:** If you use a serial cable for data transmission, tap **Baud Rate** and specify a baud rate for the connection.
- 3 Tap **Find device** to complete the modem connection.

When your phone indicates **Modem status: Ready**, use your computer to access the Internet or transfer data just as you would with a standard computer modem.

Sending a Data Call


- 1 Open the application (such as dial-up-networking) on your computer, and place the call through the application.

Note: You cannot dial data numbers on your phone's keypad. You must dial them through the computer.

- 2 When the data transfer is complete, end the call from the connected device to close the connection.

Receiving a Data Call

- 1 Your phone notifies you when the data call arrives, and transfers the call to the connected device. Use the application running on the device to answer the call.
- 2 When the data transfer is complete, end the call from the connected device to close the connection.

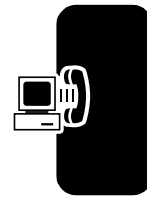


Adjusting Network Settings




Your service provider registers your phone to its network. In some situations, such as using the phone as a modem you may need to change the network registration.

Note: Some settings and/or options described in this section may not be available for all phone models.

To view and adjust network settings:


- 1 Tap  in the top application selector bar to display the phone keypad.

Getting More Out Of Your Phone

- 2 Tap , then tap **Setup** to open the setup menu.
- 3 Tap **Network setup** to open the network setup menu.

Adjusting Network Search Setup Values

Set how your phone searches for a network connection.

Tap , then tap **Search setup** to open the network search setup menu.

Network search frequency **Band** options:

Option	Description
900/1800	900/1800 MHz bands (common in Europe and Asia).
1900	1900 MHz bands (common in North and South America).
Automatic	Scan for networks in all frequency bands.

Network search **Type** options:

Option	Description
Automatic	Scan for networks automatically based on priority.
Manual	View a list of all networks from which you can choose.

Network search **Speed** options:

Option	Description
Slow	Slowest network search and repeat rate.
Medium	Medium search/repeat.
Fast	Fast search/repeat.
Continuous	Continuous search until a network is found.

Viewing the Current Registered Network

Tap **Current network** to display the current network ID.

Listing All Networks


Tap **Avail. networks** to display a list of available networks, and register your phone with a network.

Setting Preferred Networks

You can create a preferred networks list, so that the phone searches for networks by your preference.


Tap **Pref. networks** to display the preferred networks list.

Your home network is always the first entry in the list.
Other network entries are sorted by preference.

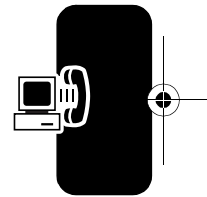

Tap and hold on the network name to open a pop-up menu to perform various operations on the entry.

Option	Description
Rearrange	Move the entry up or down in the preferred network list.
Register	Register with the network.
Delete	Delete the entry.


Tap  to add a new entry to the preferred network list.

Listing Known Networks

Tap **Known networks** to display a list of all known networks.

Managing Your Files

The file manager application makes it easy for you to create personal folders to store and manage your files and applications.

Tap  **File Mgr** in the main screen to open the file manager.

Your phone lists the available storage devices (such as **Phone** memory, and an optional removable **SD Card** or **MMC** memory card). Tap a storage device to display the root directory for the device.


Your phone may include several predefined folders:


- MyCamera** Stores photos you take with your phone's **Camera**.
- MyVoice** Stores voice records you create with the **Recorder** application.

Note: Your phone's files and folders may differ from those listed above. Refer to your phone for details.

Editing Files and Folders



Tap and hold a file or folder to open a pop-up menu to perform various operations on the file/folder. The edit menu can include the following options:

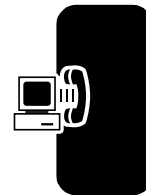Option	Description
Open with	Specify the application your phone should use to open the file (files only).
Copy or Cut	Copy or cut the file or folder to the clipboard. (Tap  , then tap Paste to paste the clipboard contents in the current folder.)
Move to	Move the file or folder to a new location.
Rename	Rename the file or folder.
Delete	Delete the file or folder.




Option	Description
Share	Send the file to another phone, computer, or hand-held device (files only).
Properties	Display information about the file or folder.


Creating a New Folder

- 1 Tap  **File Mgr** in the main screen to open the file manager.
- 2 Select the storage device, tap  to create a new folder in the current folder.
- 3 Enter a name for the folder.
- 4 Tap **Done** to save the folder.

Viewing


To change the way your files and folders are displayed, tap  and select **List** or **Thumbnail**.

Sorting

To change the way your files and folders are sorted, tap  and select **Sort by**. You can sort files or folders by **Name**, **Size**, **Time**, or **Type**.

Searching

To search for a specific file:



- 1 Tap  and select **Search**.
- 2 Enter the name of the file in the **Search name** field.
- 3 Specify the scope of the search in the **Look in** field.
- 4 Tap **Done** to begin the search.

If the file is found, the filename is listed. Tap the filename to open the file. Tap and hold the filename to display the file path.

If the file is not found, tap **Cancel** to return to the file manager screen, or tap **Again** to try another search.

Using a Removable Memory Card

You can use an optional removable memory card with your phone to store and retrieve multimedia objects (such as photos, videos, and MP3 music files). To install a memory card, see page 19.

Tap  **File Mgr**, then tap the memory card's name to display its root directory. Tap  to perform various



Getting More Out Of Your Phone

operations on the memory card. The storage device menu can include the following options:

Option	Description
Search	Search for a file or folder on the storage device.
Thumbnail/List	View storage device contents in a text-based List or graphic icon Thumbnail format.
Sort by	Change the way files and folders are sorted.
Paste	Paste the clipboard contents at the current location.
Delete all	Delete all storage device contents.
Format	Format the storage device.
Repair	Repair the storage device.
Properties	Display information about the storage device.

Getting More Out Of Your Phone

Note: Please refer to your phone for actual names and features of the options.

Using Voice Instruction

You can use voice instructions to perform many basic phone functions.


Using Voice Recognition

Press and hold the camera key on the right side of your phone until the phone sounds an alert tone. Speak a voice instruction as described below, then release the camera key to perform the corresponding function.

The voice instruction function operates in 2 modes: name/instruction mode, and digit mode. The default operating mode is name/instruction. When you speak the command **“Open Digit Dial”** or **“Open Dial Pad,”** your phone switches to digit mode so you can speak the phone number you want to dial.

Notes:

- When your phone switches to digit mode, the phone prompts you to **“Please say digits or go back,”** and then sounds a beep. (Your phone does **not** prompt you to speak when it is in name/instruction mode.)
- Your phone remains in digit mode for a few seconds after each number recognition, and then automatically returns to name/instruction mode.

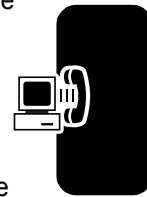


Getting More Out Of Your Phone

Voice Instructions

Press and hold the camera key, and speak the voice instruction as described to perform the corresponding function.

Note: Hold the camera key only while speaking the voice instruction. Release the key immediately after speaking. If your phone does not recognize a spoken voice instruction, it prompts you to repeat the instruction.

“contact name + Mobile (Cellphone) / Work (Office) / Home” – Your phone highlights the corresponding number listed in your address book. Press the camera key to dial the number.

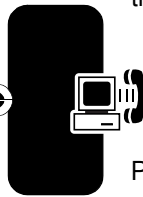

Getting More Out Of Your Phone

129

“Open Digit Dial / Open Dial Pad” – Puts your phone in digit mode to dial a phone number. Your phone displays the phone keypad, prompts you to **“Please say digits or go back,”** and then sounds a beep.

Press and hold the camera key and speak the phone number you want to dial. Release the camera key when you finish speaking. Your phone recites the recognized number, and displays the number on the keypad. If the number is correct, press the camera key to call the number. If the number is incorrect, press and hold the camera key and repeat the number you want to dial (within 10 seconds).

You can recite the following commands to perform additional phone functions:

“Go Back” – Exit the current function screen.

“Redial” – Your phone recites the last number you dialed.

“Check New Messages / Check SMS” – Your phone recites the number of unread messages you have received, and recites the name or number of each sender. (Read messages are excluded from the number.)

If the **Voice Command** message reciting function is turned on (see the following section), you can have the phone read your new message(s) by pressing the camera key after the phone recites the number of unread messages.

Note: Message reciting languages are limited to English, Mandarin, and Cantonese only.

“Check Missed Calls” – Your phone recites the number and time of missed calls you have received, and recites the name or number of each caller. (Missed calls that you have returned are excluded from the number.)

“Check Time” – Your phone recites the current time.


“Check Battery” – Your phone recites the percentage of battery power remaining.

“Check Signal” – Your phone recites the signal strength in percentage.

“Go to Homepage / Homepage” – Return to the main screen.

Reciting


You can set your phone to recite messages, feature icon names, address book contacts, and contact details, and prompt you to speak a phone number that you want to dial. For more information, see the following section.

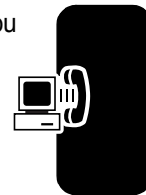


Getting More Out Of Your Phone

Setting Voice Command Options

To set your phone to recite the messages you open:

- 1 Tap  **Setup** in the main screen, then tap **Voice Command**.
- 2 Set **Voice** to **On** to activate the message reciting function.
- 3 Tap **Done** to save your setting.


Note: Message reciting languages are limited to English and Chinese only.

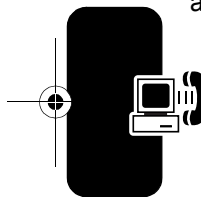

Getting More Out Of Your Phone

131

To set your phone to prompt you to speak a phone number you want to dial:

- 1 Tap  **Setup** in the main screen, then tap **Voice Command**.
- 2 Set **Digit Prompt** to **On** to activate the audible digit prompt function.
- 3 Tap **Done** to save your setting.


Press and hold the camera key, then speak the voice instruction “**Open Digit Dial**” to put your phone in digit mode. When the phone is ready, it prompts you to speak the phone number by reciting “**Please say digits or go back.**”

Personal Organizer

Calendar



You can use your phone's calendar to schedule and organize events such as appointments and meetings.

Note: You must set the correct time and date to use the calendar.

Tap  **Calendar** in the main screen to schedule or review calendar events.

Month View

The calendar initially displays a calendar for the month (shown at right).

Tap  or  to display the previous or next month.

An indicator in the lower right corner of the date box indicates that one or more events are scheduled for the day. Tap the date box to display the day's events. Tap an event to display event details.





Personal Organizer




Week View

Tap the **Month** button in the bottom button bar, then select **Week** to display the week view (shown at right).

Tap  or  to display the previous or next week.

Filled boxes indicate scheduled events for the day. A filled column indicates a full-day event. Tap the day to display the day's events. Tap an event to display event details.

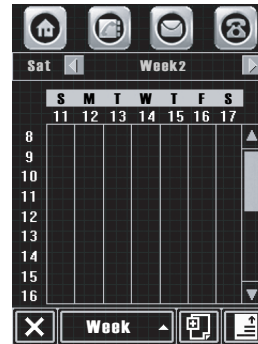



Day View

Tap a day in the month or week view to display the day's events (as shown at right).




Alternatively, you can tap the **Month** button in the bottom button bar, then select **Day** to display the highlighted day.



Tap  or  to display the previous or next day.

Tap an event to display event details.



Jumping to a Day

To quickly display the events for a specific day, tap , then tap **Go to day**. Your phone displays a calendar for the current year (shown at right).



Tap  or  to display the calendar for the previous or next year.

Tap a month and date, then tap **OK** to display the day's events. Tap an event to display event details.



Adding a New Event

Note: You must create an event to use the reminder alarm. Your phone must be turned on for the reminder alarm to sound.

- 1 Tap  **Calendar** in the main screen to open the calendar.
- 2 Tap the day to which you want to add an event. Your phone lists the day's events.
- 3 Tap  to open the new event editor (shown at right).


- 4 Tap the direct line in a field to enter event details. Pull down the scroll bar to display additional fields.
- 5 When you are finished entering information, tap **Done** to store the event.

Tip: Tap  to exit without storing the event.

Editing an Event

- 1 Tap the event to display event details.
- 2 Tap **Edit** to open the event editor.
- 3 Tap the direct line in a field to edit its contents. Pull down the scroll bar to display additional fields.
- 4 When you are finished editing information, tap **Done** to store the event.

Deleting an Event

- 1 Tap the event to display event details.
- 2 Tap , then tap **Delete Event**.
- 3 Tap **OK** to confirm the deletion.

Alternatively, to delete an event, tap and hold the event title, then select **Delete** from the pop-up menu.

Dismissing an Event Reminder

When you set a reminder alarm for an event, the phone displays an event reminder and sounds a reminder alarm.



Tap **Snooze** to turn off the event reminder for a short period of time. The reminder displays again when the snooze period expires.

Tap **Done** to dismiss the event reminder.

If you have more than one event set up for the same time, the phone displays each event in sequence. As you read and dismiss each event reminder, the next event is displayed.


Changing the Calendar Setup

You can set the calendar's daily start time, the length of time that events are stored, lunar calendar, calendar default view, and reminder snooze period.


- 1 Tap  **Calendar** in the main screen to open the calendar.
- 2 Tap , then tap **Setup**.
- 3 Tap a field to change its setting. Pull down the scroll bar to display additional fields.
- 4 When you are finished changing settings, tap **Done** to store your settings.

Sharing Event Information

You can share calendar events with others by sending the data as a vCalendar entry to another phone, computer, or hand-held device.

- 1 Tap  **Calendar** in the main screen to open the calendar.
- 2 Select the day when the event is scheduled, tap the name of the event you want to send. Your phone displays event details.



- 3 Tap , then tap **Share**.
- 4 Tap **Bluetooth**, then tap **OK** to exchange the data through a Bluetooth® wireless connection. Tap **MMS** or **Email**, then tap **OK** to send the event data in an MMS or email message.
- 5 Complete the setup procedure for the transfer method you selected.
- 6 Tap **Send** to send the event information in a vCalendar entry.



For more information about using a Bluetooth wireless connection, see page 37.

Tasks

You can create and review a checklist of tasks you need to perform, and set your phone to notify you when tasks come due.




Adding a New Task

- 1 Tap  **Tasks** in the main screen to display the task list.
- 2 Tap  to open the new task editor.
- 3 Tap the direct line in a field to enter task details, or tap ▼ to select an option from a drop list.
- 4 When you are finished entering information, tap **Done** to store the task.

Tip: Tap  to exit without storing the event.


Viewing Tasks

Tap  **Tasks** in the main screen to display the task list.

Tap a task to display its details. Tap the check box ☐ preceding the task name to indicate that you have completed the task.



Tap and hold on a task to open a pop-up menu from which you can select to **Share**, **Delete**, or **Edit** the task.


To sort the task list, tap the *sort order* button in the bottom button bar. You can choose to display **All tasks**, **Uncheck**, **Due**, or **Done** tasks.

Tap  to perform various operations on the task list.

Note Pad

You can write and store notes on your phone.


- 1 Tap  **Note Pad** in the main screen to open the note pad editor.
- 2 Tap  to select a text entry mode, and enter the information you want to record.
- 3 When you are finished entering information, tap **Done**.
- 4 Enter a name, storage location, and type for the note.
- 5 Tap **Done** to save the note.

To read a note that you have saved, tap , tap **Open**, then select the note you want to open.






Drawing Pad

Use the drawing pad to create drawings and illustrations, or edit photos and images stored on your phone.

Tap  **Drawing** in the main screen to open the drawing pad editor.


To draw a new picture:

- tap the drawing tools icon  and select a tool from the drawing tools menu (shown at right)
- tap  to adjust settings for the selected tool
- tap the color picker (in the upper right corner of the drawing pad editor) to set a drawing color
- tap **100%** and select a zoom factor to zoom in/out on the drawing canvas

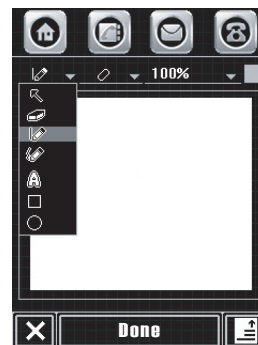


Personal Organizer



To edit an existing picture, tap , tap **Open**, then select the picture you want to open. Use the drawing tools to edit the picture.

Tip: Tap and hold a selected area on the picture to open a pop-up menu from which you can select **Copy**, **Cut**, or **Paste** into the selected area.

Tap  to perform various drawing-related operations:

Option	Description
New	Open a blank canvas to create a new picture.
Undo or Redo	Undo or redo the last drawing operation.
Open	Open an existing picture.
Share	Share the picture.
Insert stamp	Insert another image into the picture.
Select all	Select all picture elements.
Choose canvas	Select the drawing canvas size.
Delete	Delete the picture.

To save a picture:


- 1 Tap **Done**.
- 2 Enter a name, storage location, and type for the picture.
- 3 Tap **Done** to save the picture.


Personal Organizer



Alarm Clock

Your phone has an alarm clock with 2 separate alarms that you can set to alert you at the time(s) you specify.

- 1 Tap  **Alarm** in the main screen to display the alarm clock setup screen (shown at right).
- 2 Tap a check box ☐ to activate the alarm. A check mark ☒ indicates that the alarm is activated.
- 3 Tap below the alarm name to set the alarm time. Set the desired time, then tap **OK** to store it.
- 4 Tap **Snooze** to set the snooze period.
- 5 Tap **Done** to store your settings.

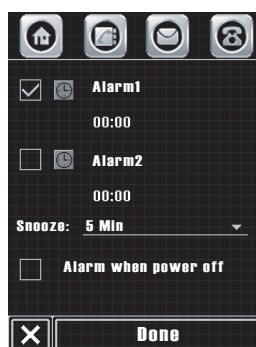

Personal Organizer



When the alarm expires, your phone displays an alarm reminder and sounds an alert.

Tap **Snooze** to turn off the event reminder for a short period of time. The alarm sounds again when the snooze period expires.

Tap **Cancel** to turn off the alarm.

When you select **Alarm when power off** in the alarm clock setup screen, your phone turns itself on if necessary to alert you when the alarm expires.


World Time


Your phone can display the current time and date for multiple cities around the world.


Tap  **World Time** in the main screen to display the world time screen (shown at right).

To replace a city listing in the world time screen, tap the city name to display the time zone chart (shown below). Tap the city name again to display a city list. Select a new city, then tap **OK** to store it.

Alternatively, tap a time zone in the time zone chart to display a list of cities in that time zone. Select a new city, then tap **OK** to store it.

You can reset the time and date for a listed city. Tap the city icon  preceding the city name, then tap the time and/or date field to change it. Tap **OK** to save your changes.

To add a new city to the city list, tap , then tap **Add New City**. Enter the city name and its time zone, then tap **Done** to store it.

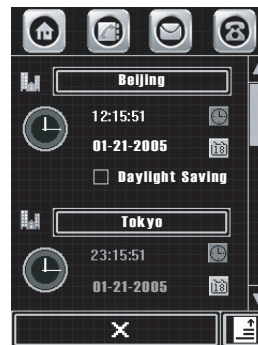

Personal Organizer



Voice Recorder




You can record personal messages and phone calls on your phone.


Making a Recording



Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.

Personal Organizer



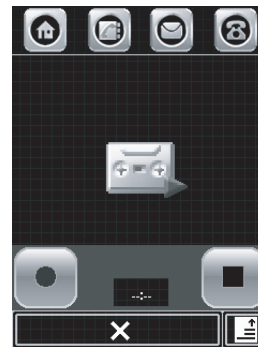

- 1 Tap  **Recorder** in the main screen to activate the recorder (shown at right).
- 2 Tap  to start recording.
- 3 Speak into the phone.
- 4 Tap  to stop recording. The voice record is automatically saved to the **MyVoice** folder on your phone.



- 5 To play back the voice record you just made, tap . To stop playback, tap .

Playing a Recording

- 1 Tap  **Recorder** in the main screen to activate the recorder.
- 2 Tap , then tap **Open** to open the **MyVoice** folder.
- 3 Tap the voice record you want to play, then tap **Open** to play it.


Tip: The voice record name identifies the date and time when the file was recorded. The recording date and time is also displayed when you play the voice record.

Personal Organizer



Calculator


You can use your phone as a calculator.

Tap  **Calculator** in the main screen to display the calculator (shown at right).

Tap the numeric and calculation keys to perform a calculation.

Tap **=** to calculate the result.

Tap **C** to clear the calculation.

Tap  to clear the last entry, one digit at a time, when performing a calculation.

Tap **X** to return to the main screen.



Personal Organizer



Tap the following keys to perform the described functions:

Function	Description
+/-	Change the entry's sign (positive/negative).
M+	Store the sum of the current calculation result, and the stored number.
MS	Clear the stored number, and store the current calculation result.
MR	Display the stored number.
MC	Clear the stored number.
.	Insert decimal point
÷	Divide
×	Multiply
-	Subtract
+	Add


Personal Organizer



Security

Locking the SIM Card

Your *Personal Identification Number* (PIN) code protects the information stored on your SIM card. When the SIM card is locked, you must enter your SIM card PIN code to unlock the SIM card each time you turn on the phone or insert the SIM card in the phone. Your SIM card PIN code is given to you by your service provider.

- 1 Tap  **Security** in the main screen, then tap **PIN On** or **Off** to activate or deactivate the feature.
- 2 Enter your SIM card PIN1 code when prompted, and then tap **OK** to submit your code and save your setting.

Unblock the SIM Card PIN Code

If you enter an incorrect SIM card PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**. You must enter a PIN unblocking key (PUK) code, which you can obtain from your service provider.

Caution: If the unblocking attempt is tried unsuccessfully 10 times, the SIM card is permanently disabled and your phone displays **SIM Disabled**.

Security



Unblock the SIM Card PIN2 Code

If you enter an incorrect SIM card PIN2 code 3 times in a row, your phone's SIM PIN2 protected features are disabled and your phone displays **SIM Blocked** when you try to use a PIN2 feature. You must enter a PIN2 unblocking key (PUK2) code, which you can obtain from your service provider.



News and Entertainment



Micro-Browser


News and Entertainment



The micro-browser lets you access Web pages and Web-based applications on your phone. Contact your service provider to set up access, if necessary.

Note: Your phone may use a high-speed *General Packet Radio Service* (GPRS) network connection. This type of connection is identified by a **G** indicator in the status bar. If the **G** indicator is blacked out or not visible during a micro-browser session, your phone is using a standard CSD voice channel connection. The type of network connection your phone uses depends on your service provider's network. Your network connection charges may vary depending on the type of connection used.

 
Starting a Micro-Browser Session

Tap  **Browser** in the main screen to launch the micro-browser. Your phone displays the micro-browser startup screen.


Tap a bookmark, service, or application to select it.

If you are unable to establish a network connection with the micro-browser, contact your service provider.

Interacting With Web Pages

Pull down the scroll bar to scroll through a text page or option list. Tap an option to select it. Tap  at any time to return to the previous screen.

Some Web pages may contain text fields for exchanging information with a Web site. Tap the field and enter text in the usual way.

Tap  to perform various micro-browser operations. The micro-browser menu can include the following options:

Option	Description
Favourites	Display a list of your favorite Web-based sites, and add a new site to the list.
Go to site	Enter a Web address (URL) to go to a Web site.
Security	Adjust micro-browser security settings.
Profile setting	Select a browser profile setting to use to connect to the Internet.
Browser setup	Adjust micro-browser settings.
More	Display additional micro-browser options.
Exit	Disconnect from the Internet and exit the micro-browser application.



News and Entertainment

Downloading Files



You can download a file, game, or application from a Web page onto your phone by selecting its link.

You must specify the location where you wish to save the file, and your phone must have sufficient memory storage space to store the file.

You can purchase a variety of games, applications, and multimedia content for your phone. In most cases, you can download and preview content before you purchase it. After previewing the content, you can choose to discard it, or purchase it and install it on your phone.

Notes:

- Call charges apply during download sessions.
- Your phone may now allow you to perform some operations (rename, view details) on purchased or predefined multimedia content stored on your phone. Usually, you cannot forward predefined or purchased multimedia content to other phone users.
- Some games might make your phone vibrate. Some ring tones vibrate automatically. If you use one of these tones, your phone vibrates even when it is not set to a vibrate ring style.

Disconnecting From the Internet


Tap , then tap **Exit** to disconnect from the Internet and exit the micro-browser application.

Using Network Connection Profiles



You can use different Internet accounts to connect to the Internet in different ways. Use the network feature to select or create a network connection profile for an Internet account.

Selecting a Profile

To select a network connection profile, tap  **Network** in the main screen, tap the profile you want to use, then tap **Connect** to connect to the Internet using the selected profile.

Creating a New Profile

To create a new network connection profile, you must enter the following configuration settings. If necessary, contact your service provider to obtain the following information:

Option	Description
Profile name	Enter the profile name.
GPRS setting:	
APN	GPRS access point name (the name of the WAP service provider).
User name	User name for GPRS APN connection.
Password	Password for GPRS APN connection.






News and Entertainment

**News and Entertainment**


Option	Description
Re-type password	Re-enter password for GPRS APN connection.
Timeout	Time at which the phone exits the micro-browser application when no keypress activity is detected.
DNS server 1 and 2	Primary and backup DNS IP servers.
CSD setting:	
Dial in number	Phone number to use to set up a CSD connection.
User name	User name for CSD connection.
Password	Password for CSD connection.
Re-type password	Re-enter password for CSD connection.
Baud rate	Connection speed for CSD connection.
Line type	Line type (modem or ISDN) for CSD connection.
Timeout	Time at which the phone exits the micro-browser application when no keypress activity is detected.
DNS server 1 and 2	Primary and backup DNS IP servers.

To create a network connection profile:

- 1 Tap  **Network** in the main screen to display the network screen.
- 2 Tap  to create a new network connection profile.
- 3 Tap the direct line in a field to enter the setting. Pull down the scroll bar to display additional fields.
- 4 When you are finished entering information, tap **OK** to store the profile.

Tip: Tap  to exit without storing the profile.

Setting the Default Profile

The default network connection profile is marked with the network icon . To set a new default profile, tap and hold the profile, then select **Set as default** from the popup menu.



News and Entertainment

Games and Applications




Your phone may contain Java™ games or applications that add features and functionality to your phone. Java games and applications are accessed from the main screen on your phone.


STK



Your SIM card may contain additional *SIM Toolkit* (STK) applications that add features and functionality to your phone.

Tap  **STK** on the main screen to display a list of the STK applications available for you to use.

Tap a service or feature to select it. Your phone displays the service or feature screen.

Pull down the scroll bar to scroll through a text page or option list. Tap an option to select it. Tap  at any time to return to the previous screen.

Some screens may contain text fields where you must provide information in order to use a service or feature. Tap the field and enter text in the usual way.


For more information about the STK applications available on your SIM card, contact your service provider.

News and Entertainment

Radio



You can use your phone to listen to FM radio stations when the optional Motorola Original™ FM Stereo Radio Headset accessory is plugged into the phone's headset jack.



Tap  **FM radio** in the main screen to turn on the radio and access the radio controls (shown at right).



Alternatively, you can press game key "B" at any time to turn on the radio and/or access the radio controls.




News and Entertainment



Tuning a Station

Tap  or  to step down or up to the next frequency setting.

Tap  or  to search and set the previous or next active FM station.

Using Preset Channels

Tap  to assign a channel number to the current tuned station.

Tap  or  to select the previous or next channel.


Adjusting Radio Settings

Tap the volume slider to adjust the radio volume. Alternatively, you can press the volume keys to adjust radio volume.

Tap  to mute the radio.

Tap **Hide** to hide the radio when you want to use the phone screen for other applications. The radio continues to play.



Tap  to edit radio channels, play the radio through your phone's stereo speakers, or set the radio to play mono or stereo sound.

Sending and Receiving Calls With the Radio On

 



Your phone rings or vibrates as usual to notify you of an incoming call, message, or other event. You can answer the call, or ignore the call and continue listening to the radio.

If you answer the call, tap **End** as usual to end the call and resume the FM broadcast.

You do not have to turn off the radio to make outgoing calls. The radio is muted automatically when you dial an outgoing call from the phone keypad.

Troubleshooting

Check these questions first if you have problems with your phone. If you need additional help, contact the Motorola Customer Call Center at (852) 2506-3888 (Hong Kong).

Question	Answer
Is your battery charged? Do you see  in the display?	The battery level indicator  should have at least 1 segment showing. If it does not, recharge your battery (see page 23.)
Do you have a valid SIM card inserted in your phone?	If necessary, turn off your phone and make sure that you have inserted a valid SIM card (see page 18).
Does the handset have a signal? Do you see  in the display?	The signal strength indicator  should have at least 1 segment showing. If it does not, move to an area with a stronger signal to use your phone.
Is the earpiece volume too low?	While on a call, press the upper volume key on the side of your phone.



Troubleshooting




Troubleshooting

Question	Answer
Is the other party unable to hear you?	Your phone may be muted. Tap Mute if necessary to unmute the phone. Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.
Has the phone been damaged, dropped, or gotten wet?	Dropping your phone, getting it wet, or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.
Was a non-Motorola battery or battery charger used?	

The following refer to specific problems:


 

Problem	Solution
My phone was stolen. To whom should I report this?	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
I forgot my password.	See page 52.



Problem	Solution
I pressed the power key, but nothing happened.	Be sure to press and hold the power key  for 2 seconds, until the display appears and you hear an alert. If nothing happens, check that a charged battery is installed (see page 22).
The display says: Insert SIM Card or Check SIM Card even though I have inserted my SIM card in the phone.	The SIM card may be incorrectly inserted. Check the SIM card to make sure that it is inserted properly (see page 18).
The display says: SIM Blocked. How do I unblock my SIM card?	Call your service provider (the company that sends you your monthly wireless service bill) to obtain the PIN unblocking key (PUK) code (see page 147).
The display says: Enter Unlock Code. How do I unlock my phone?	Enter the factory-preset unlock code (1234), or the last 4 digits of your phone number. If this fails, call your service provider (the company that sends you your monthly wireless service bill).



Troubleshooting

**Troubleshooting**

Problem	Solution
My phone does not ring.	If you see  on the ring style button in the main screen, then the ringer is turned off. To change the ring style, see page 54.
I tried to place a call and heard an alternating high/low tone.	Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until the display shows the name of your service provider before making a call.
I cannot send/receive calls.	<p>Make sure that you have a phone signal (the signal strength indicator  should have at least 1 segment showing). Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings.</p> <p>Your phone also may have the call barring feature turned on. If you know the call barring password, you can change this setting in the security menu (tap  Security in the main screen, then tap Call barring).</p> <p>Also, check to be sure your SIM card is installed and working.</p>

Problem	Solution
My phone has poor reception and drops calls.	Make sure you have a phone signal (the signal strength indicator  should have at least 1 segment showing). Stay clear of any obstructions such as bridges, parking garages, or tall buildings.
I cannot hear others on my phone.	While on a call, press the upper volume key. Your phone display should show the volume increasing. Also, make sure that your phone's earpiece is not blocked by its carrying case.
How do I see the calls I sent or received?	To see the most recent calls you dialed or received: <ol style="list-style-type: none"> 1 Tap  Recent in the main screen. 2 Tap Answered calls, Missed calls, or Dialled calls. 3 Tap an entry to display call details. 4 Tap Call to call the entry's number.



Troubleshooting



Troubleshooting

Problem	Solution
My phone's display is too dark.	Use the Backlight setup feature to change the brightness level in your display (see page 57). You can also use the LCD sleep time feature to change the length of time that the display backlight stays on (see page 57).
My battery didn't last as long as I expected. What can I do to extend battery life?	Your battery's performance is affected by charge time, feature use, temperature changes, backlight use, and other factors. For tips on extending battery life, see page 20.
I am unable to create a voice record	Try moving to a quieter location to make your voice recording. Hold the phone about 4 inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.

Problem	Solution
I launched the micro-browser but the display says: Network Not Available.	You may be in an area without service, or you may be connected to a network that does not support Internet access.
I launched the micro-browser but the display says: Server Not Responding.	Try again in a few minutes. The servers may be temporarily busy.



Troubleshooting

Specific Absorption Rate Data

This model phone meets the international standards for exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.¹ Tests for SAR are conducted in accordance with CENELEC² testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is 0.5 W/kg.³

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this

product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

1. The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
2. CENELEC is a European Union standards body.
3. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

RF Energy Interference

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Index

A

accessories 17, 113, 155
 active line, changing 59
 address book
 adding contact 94
 calling a contact 96
 category ring tone 97
 category views 93
 copying contacts 99
 deleting a contact 98
 distinctive ring tone 95
 entry details 93
 fast dial 96
 group 95
 owner's information 101
 searching 98
 sending a message 96
 sharing contacts 100
 alarm clock 141
 alert
 defined 54
 setting 54
 turning off 25, 26, 61
 volume, setting 102
 animation
 downloading 75
 sending 31
 wallpaper 55

answered calls list 64, 106
 answering a call 26, 114
 applications
 purchasing 151
 using 154
 appointments. *See* calendar
 automatic redial 60

B

backlight 57
 barring calls 109
 battery
 charging 23
 extending battery life 20,
 57, 58
 installing 22
 level indicator 43
 Bluetooth 3, 37, 113, 114
 Bluetooth indicator 43
 brightness, setting 57
 browser. *See* micro-browser

C

cable, connecting to phone
 116
 calculator 145
 calendar

reminders 134, 135
 sharing events 136
 using 132

call

alert, turning off 25, 26, 61
 answered calls 64, 106
 answering 26
 auto answer 114
 barring 109
 barring password, changing 50
 canceling 61
 conference call 107
 cost 111
 costs 112, 113
 deleting 106
 dialed calls 64, 106
 dialed calls list 106
 dialing another call 66
 diverting 107
 emergency number 62
 ending 25, 26
 forwarding 107
 handsfree speaker 50
 hold 65
 international access code 62
 missed calls 64, 106
 mute 65
 received calls list 106
 receiving 26

recent calls 106
 ring style 54
 ring tone, setting 55
 storing 106
 timing 111
 transferring 67
 call cost information 112, 113
 Call Failed, Number Busy message 60
 call meters 111
 call timers 111
 caller ID 60
 calling line identification. See caller ID
 camera
 illustration 2
 recording a video 2, 28
 taking a photo 2, 28
 camera key 2, 28
 car kit 113
 center select button 45
 clock 43, 54
 codes
 changing 50
 default 50, 51, 52
 forgetting 52
 conference call 107
 contact
 adding to address book 94
 calling 96

- copying 99
- deleting 98
- group 95
- searching 98
- sending a message 96
- content, purchasing 151
- cost trackers 111
- credit information 112, 113

D

- data, sharing 115
- date, setting 54
- deleting a call 106
- dialed calls list 64, 106
- dialing a number 109
- display
 - backlight 57
 - brightness 57
 - description 41
 - language 102
 - main screen 41
- diverting calls 107
- drafts folder 75, 76
- drawing pad 139

E

- earpiece volume 25
- email
 - copying 88, 89
 - inbox setup 89
 - moving 88, 89

- reading 88, 89
- receiving 88
- sending 86
- emergency number 62
- end key 25, 26
- ending a call 25, 26
- Enter Unlock Code
 - message 51
- extension number, dialing 63

F

- fast dial 96
- file manager 123
- fixed dial 109
- FM Stereo Radio Headset 155
- forwarding calls 107
- 4-way navigation key 44

G

- game keys 45
- games
 - playing 154
 - purchasing 151
- GPRS indicator 43, 149

H

- handsfree speaker 50
- handsfree use 113
- handwriting 103

headset
 accessory, using 113
 FM Stereo Radio Headset
 155
 hold a call 65

I

IM 82
 incoming call
 answering 26
 canceling 61
 forwarding 107
 Incoming Call message 60
 indicators
 battery level 43
 Bluetooth 43
 GPRS 43, 149
 signal strength 43
 information, sharing 115
 input settings 103
 instant messaging. *See* IM
 international access code
 62
 Internet network connection
 settings 152

J

Java applications 154

K

key

171

camera 2, 28
 center select button 45
 end 25, 26
 4-way navigation 44
 game 45
 lock 27
 power 24
 send 25, 26
 volume control 25, 37,
 156

L

language, setting 102
 line, changing 59
 lock
 phone 27, 51
 SIM card 147
 lock key 27
 Low Battery message 43

M

main screen
 contents 46
 defined 41
 master clear 104
 master reset 104
 media player 36
 memory card 19, 117, 123,
 126
 Memory is Full! message
 74

menu

- entering text 47
- language, setting 102

message

- deleted messages 76
- deleting 74
- draft 75, 76
- email 85
- inbox setup 79
- MMS, defined 31
- moving to another folder 78
- outbox 72
- personal folder 77
- reading 74
- receiving 72
- replying 74
- ring tone alert, setting 55
- sending 70
- signature, creating 69
- status 72
- viewing 75

micro-browser

- Java applications 154
- network connection settings 152
- using 149

- missed calls list 64, 106
- MMC card 19, 117, 123, 126

- MMS. *See* message
- modem 119

multimedia message

- receiving 35, 72
- sending 3, 31

multimedia messaging

- service. *See* message

music

- playing 3, 36
- sending 31

mute 65

- my telephone number 27, 53

N

- network settings 120

- note pad 138

number

- storing in address book 94
- storing your number 53
- viewing your number 27

O

- objects, sharing 115

- optional accessory, defined 17

- optional feature, defined 17

- organizing files 123

- OTA, defined 116

- outbox 72

- owner's information 101

P

passwords. *See* codes

personal folder 77

phone

active line, changing 59

alert, turning off 25, 26,
61

auto answer 114

clear stored information
104

codes 50

credit information 112,
113

date, setting 54

language, setting 102

locking 51

locking and unlocking 27

network settings 120

reset all options 104

ring style 54

security code 50

time, setting 54

turning on/off 24

unlock code 50

unlocking 24, 51

phone number

active line, changing 59

international access code
62

redialing 59

storing in address book
94

storing your number 53

viewing your number 27

phone theme 3, 55

phonebook

capacity, checking 100

picture ID 60

photo

downloading 75

picture ID 60

sending 31

taking 2, 28

wallpaper 55

picture

downloading 75

sending 31

wallpaper 55

picture ID 60

PIN code

changing 50

defined 147

entering 147

unblocking 147

PIN2 code

changing 50

unblocking 148

power key 24

profile, network connection
152

PUK code 147

Q

quick card
 inserting in MMS
 message 33
 saving 36, 73

R

radio 25, 155
 Real player 36
 received calls list 106
 recent calls 64, 106
 recorder 143
 redial
 automatic redial 60
 busy number 59
 reminders
 calendar 134, 135
 ring alert
 turning off 26
 ring style, setting 54
 ring tone
 downloading 75
 playing 3, 36
 sending 31
 setting 55
 setting for contact 95
 volume, setting 102
 ringer volume, setting 102

S

SD card 19, 117, 123, 126

security code
 changing 50
 default 50
 forgetting 52
 send key 25, 26
 short message service. *See*
 message
 signal strength indicator 43
 silent alert, setting 54
 SIM Blocked message 24,
 147, 148
 SIM card
 applications 155
 defined 18
 installing 18
 locking 147
 PIN code entry 24
 PIN code, changing 50
 PIN2 code, changing 50
 precautions 18
 SIM Blocked message
 24, 147, 148
 SIM Disabled message
 147
 unblocking 147
 unlocking 147
 SIM Disabled message 147
 SIM PIN code
 changing 50
 defined 147
 entering 147
 unblocking 147

SIM PIN2 code
 changing 50
 unblocking 148
 SMS. *See* message
 song
 playing 3, 36
 sending 31
 sound
 downloading 75
 playing 3, 36
 sending 31
 speaker 2, 102
 standby time, increasing 57
 STK 155
 storing a call 106
 stylus
 illustration 2
 using 41
 synchronizing data 116
 system volume 102

T

tasks 137
 telephone number
 storing in address book
 94
 storing your number 53
 viewing your number 27
 text, entering 47
 theme 3, 55
 time, setting 54

175



touchscreen
 calibrating 103
 input settings 103
 volume, setting 102
 transfer a call 67
 trash folder 76
 travel charger 23
 turbo dial 64

U

unblocking the SIM card
 147
 unlock
 phone 27, 51
 SIM card 147
 unlock code
 bypassing 52
 changing 50
 default 50, 51, 52
 entering 24, 51, 77

V

vCalendar 136
 vCard 100
 vibrate alert
 setting 54
 turning off 25, 26, 61
 video
 playing 3, 36
 recording 2, 28
 video clip

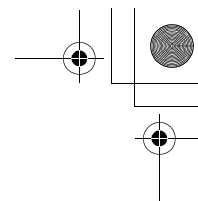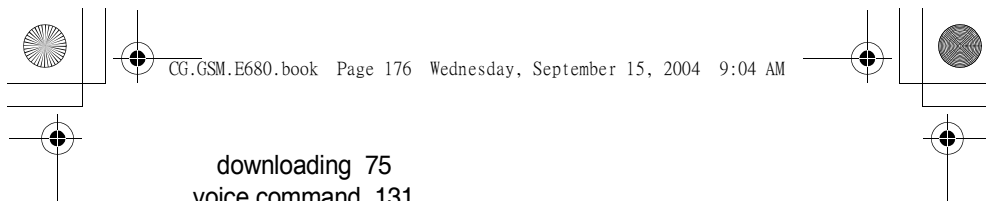

downloading 75
voice command 131
voice instruction 128
voice records 143
voicemail 63
volume keys 25, 37, 156
volume, setting 25, 102

W

wallpaper 55
Web pages 149
world time 142

